



F020058

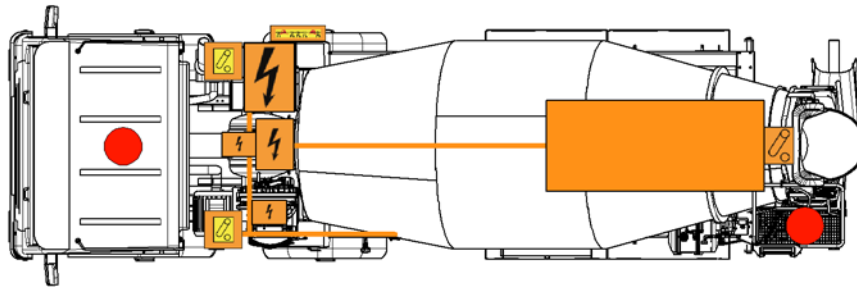

F020059

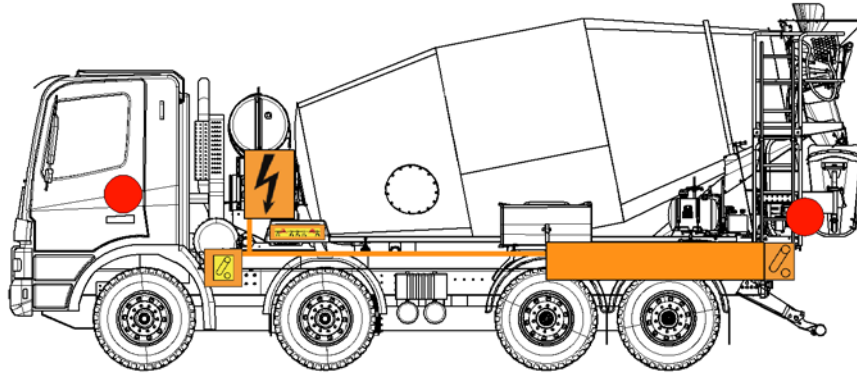

Switch off the main switch! Location, depending on the type of truck.

Disconnect 24 V vehicle battery!

Switch off the high-voltage system power!

Switching off the high-voltage system power


	Main switch		High-voltage isolation point
	Service Disconnect		High-voltage battery
	High-voltage components		High-voltage cable
	Emergency stop	When the emergency stop button is pressed, the mixing drum stops.	The HV system is not free of power!

There are two options for switching off the high-voltage system power completely:

– Cut the high-voltage isolation point.



Cut out 2 cm to 3 cm from the marked cable!

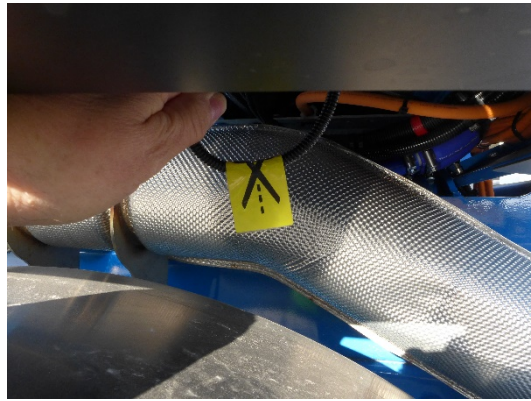

– Pull the Service Disconnect.



Unlock the bar.



Fold up the bar.



Unlock the Service Disconnect.



Pull the Service Disconnect.

For further information, refer to: Truck rescue map and ETM rescue manual.