

---

# **Airbus A350 NLG Tooling Catalogue**

**A350 800/-900 NLG PN: 4816A0000-06  
A350-1000 NLG PN: 6406A0000-01**

---

 
**Technical Presentation**

# **LIEBHERR**

**Liebherr-Aerospace Lindenberg**

## Function: Special tools for specific tasks on A350 NLG

- NOTE: GSE PN: 6904A0000-01 valid for A350 NLG -800/-900/-1000, Procurable @ Liebherr Aerospace
- GSE PN: 6260A0000-01 valid for A350 NLG -800/-900 only (Non Procurable, replaced by PN: 6904A0000-01)

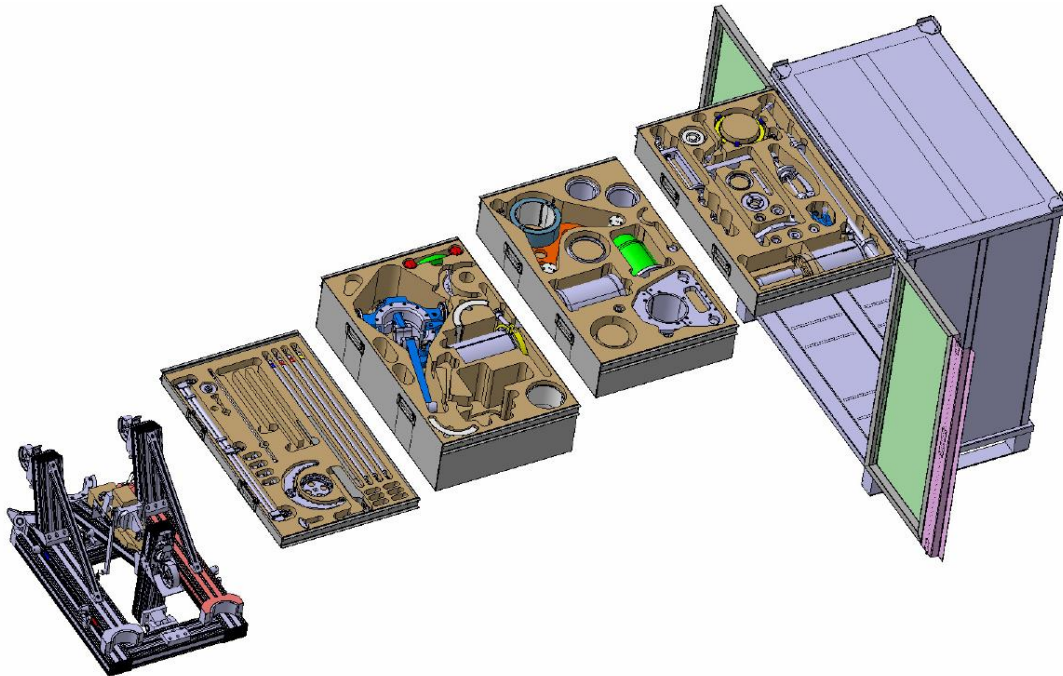

- BOX Dimensions : 1578mm x 1324mm x 836 mm
- Total Box Weight (including all tools) approx. : 360 Kg



4816A0000-06



6406A0000-01

Ref.: TEM 6904A0000-01  
TEM 6904A0000-01 in Process  
Ref.: TEM 6260A0000-01  
TEM available

# Parts List Tool Set A350 GSE -800 / -900 / -1000



4816A0000-06



6406A0000-01

Pos.	Part Number	Tool Name
1	6904A9700-01	TRANSPORT CASE
2	5035-0201W50	SLEEVE
3	5311A0000-01	GROUND LOCK PIN
4	6026-4101	PROTECTING COVER
5	6026-4102	PROTECTING COVER
6	6026A4400-01	CLAMPING FIXTURE
7	6260-0002	ASSEMBLY PUNCH
8	6260-0003	SOCKET WRENCH
9	6260-0005	SOCKET WRENCH
10	6260A0100-01	ASSEMBLY TOOL
11	6904A0100-01	ASSEMBLY TOOL
12	6260A0200-01	ASSEMBLY TOOL
13	6260A0300-01	ASSEMBLY TOOL
14	6260A0400-01	SOCKET WRENCH
15	6260A0500-01	GUIDE BOLT
16	6260A0600-01	GUIDE BOLT
17	6260A0700-01	PULLER
18	6260A0800-01	SOCKET WRENCH
19	6260B0900-01	REMOVING TOOL
20	6260A1000-01	PULLER EXTRACTING TOOL
21	6904A2000-01	ASSEMBLY TOOL
22	6260-0001	ASSEMBLY TOOL
23	6260A3000-01	PROTECTING COVER, ASSY
24	6260A4000-01	TOOL DRAWING TOOL

Pos.	Part Number	Tool Name
25	6260B5100-01	REMOVING TOOL
26	6904A1100-01	GUIDE BLOCK
27	6260A6500-01	INSTALLING TOOL
28	6260A6800-01	INSTALLATION JIG
29	6260A6600-01	REMOVING TOOL
30	6260A6000-01	INSTALLING TOOL
31	6260A7000-01	HOLDING TOOL
32	6260A8000-01	HOLDING FIXTURE
33	6260A9000-01	EXTRACTING TOOL
34	6260A6700-01	REMOVING TOOL
35	6904A5200-01	GUIDE BLOCK
36	5035-0020W01	MOUNTING SLEEVE
37	5035-0023W01	SEAL MOUNTING TOOL
38	5665A0000-01	MOUNTING DEVICE
39	5814A0000-01	SEAL MOUNTING TOOL
40	5677-0001	MOUNTING SLEEVE
41	5815A0000-01	MOUNTING DEVICE
42	5807A0000-01	MOUNTING DEVICE
43	5035-0043W01	INSTALLING TOOL
44	6260A6900-01	LIFTING GEAR
45	6904A9100-01	EXTENSION
46	6286A0000-01	SPECIAL SPANNER
47	6287A0000-01	SPECIAL SPANNER
48	6904A9000-01	PULLER EXTRACTING TOOL

# Task and GSE tool allocation (overview 1 of 2)



4816A0000-06



6406A0000-01

Part Number	Tool Name	R/I Drag Stay
5311A0000-01	GROUND LOCK PIN	X
6026A4400-01	CLAMPING FIXTURE	X
6260A0100-01	ASSEMBLY TOOL	X
6260A0200-01	ASSEMBLY TOOL	X
6904A2000-01	ASSEMBLY TOOL	X
6260A8000-01	HOLDING FIXTURE	X

NOTE on  
Page 5

Part Number	Tool Name	R/I Retraction Actuator
5311A0000-01	GROUND LOCK PIN	X
6260A0500-01	GUIDE BOLT	X
6260A0800-01	SOCKET WRENCH	X
6260B0900-01	REMOVING TOOL	X

Part Number	Tool Name	R/I Torque Links
5311A0000-01	GROUND LOCK PIN	X
6260-0002	ASSEMBLY PUNCH	X
6260A0300-01	ASSEMBLY TOOL	X
6260A1000-01	PULLER EXTRACTING	X
6904A2000-01	ASSEMBLY TOOL	X
6260-0001	ASSEMBLY TOOL	X
6260A8000-01	HOLDING FIXTURE	X

Part Number	Tool Name	R/I Steering Actuator
5311A0000-01	GROUND LOCK PIN	X
6260-0005	SOCKET WRENCH	X
6260A0400-01	SOCKET WRENCH	X
6260A0600-01	GUIDE BOLT	X
6260A0700-01	PULLER	X
6260A3000-01	PROTECTING COVER, A	X
5665A0000-01	MOUNTING DEVICE	X
6904A9000-01	PULLER EXTRACTING T	X

Part Number	Tool Name	R/I Shock Strut
5311A0000-01	GROUND LOCK PIN	X
6026-4101	PROTECTING COVER	X
6026-4102	PROTECTING COVER	X
6260A0400-01	SOCKET WRENCH	X
6260B5100-01	REMOVING TOOL	X
6260A6500-01	INSTALLING TOOL	X
6260A6800-01	INSTALLATION JIG	X
6260A6600-01	REMOVING TOOL	X
6260A6000-01	INSTALLING TOOL	X
6260A7000-01	HOLDING TOOL	X
6904A5200-01	GUIDE BLOCK	X
5035-0043W01	INSTALLING TOOL	X

Part Number	Tool Name	Strut Assembly
5035-0201W50	SLEEVE	X
5311A0000-01	GROUND LOCK PIN	X
6026-4101	PROTECTING COVER	X
6260A9000-01	EXTRACTING TOOL	X
6260A6700-01	REMOVING TOOL	X
5035-0020W01	MOUNTING SLEEVE	X
5035-0023W01	SEAL MOUNTING TOOL	X
5814A0000-01	SEAL MOUNTING TOOL	X
5677-0001	MOUNTING SLEEVE	X
5815A0000-01	MOUNTING DEVICE	X
5807A0000-01	MOUNTING DEVICE	X

# Task and GSE tools allocation (overview 2 of 2)

✓	4816A0000-06
✓	6406A0000-01

Part Number	Tool Name	Wheel Change
5311A0000-01	GROUND LOCK PIN	X
6026-4102	PROTECTING COVER	X
6260-0003	SOCKET WRENCH	X
6904A9100-01	EXTENSION	X

Part Number	Tool Name	R/I Springs
5311A0000-01	GROUND LOCK PIN	X
6260A4000-01	TOOL DRAWING TOOL	X

Part Number	Tool Name	Servicing
5311A0000-01	GROUND LOCK PIN	X
6904A1100-01	GUIDE BLOCK	X

Part Number	Tool Name	R/I Uplock Roller
5311A0000-01	GROUND LOCK PIN	X
6286A0000-01	SPECIAL SPANNER	X

 
Part Number	Tool Name	Transport
6260A6900-01	LIFTING GEAR	X

Part Number	Tool Name	R/I SCOV
6904A9000-01	PULLER	X
5665A0000-01	MOUNTING DEVICE	X

Part Number	Tool Name	R/I Drag Stay
5311A0000-01	GROUND LOCK PIN	X
6026A4400-01	CLAMPING FIXTURE	X
6260A0100-01	ASSEMBLY TOOL	X
6260A0200-01	ASSEMBLY TOOL	X
6904A2000-01	ASSEMBLY TOOL	X
6260A8000-01	HOLDING FIXTURE	X

**NOTE**

**NOTE:**  
 ASSEMBLY TOOL PN 6260A0100-01 for 800/900  
 ASSEMBLY TOOL PN 6904A0100-01 for -1000

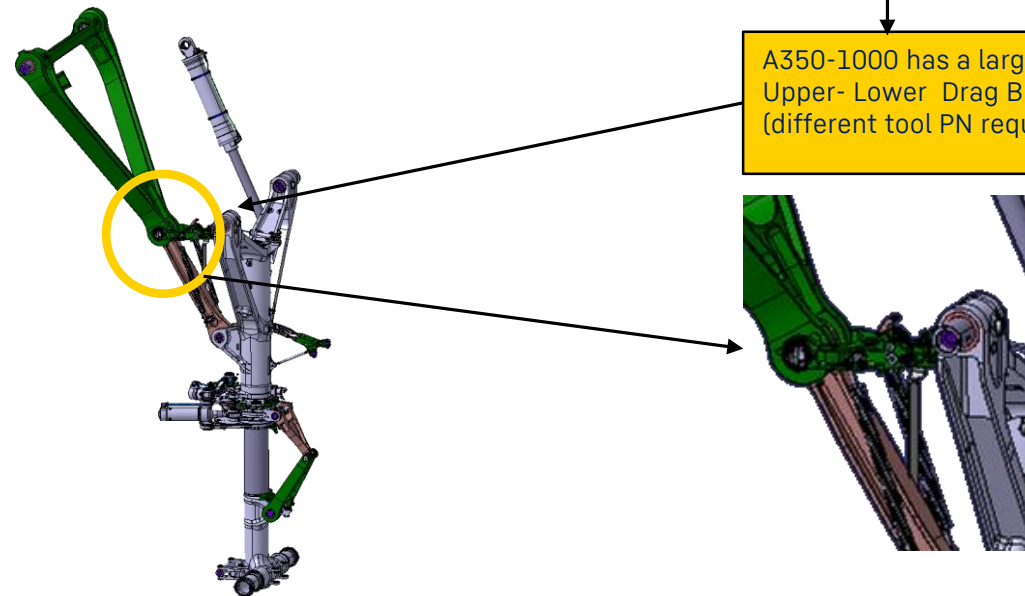

A350-1000 has a larger bore diameter on Upper- Lower Drag Brace / Lock Link (different tool PN required - 6904A0100-01)

A350 NLG Liebherr Tooling Catalogue  
**A350 Case PN: 6904A9700-01**

✓	4816A0000-06
✓	6406A0000-01

*Ref.: -800/900 Case TEM 6904A9800-01 (for PRE 6260A0000-01)  
Ref.: -1000 Case TEM 6904A9700-01 (for POST 6904A0000-01)  
No specific CMM / CRM reference number*

Function: Transport of GSE




# A350 Mould PN: 6904A9900-01

 ✗	Line Maintenance	✓	4816A0000-06
✓	Heavy Maintenance	✓	6406A0000-01

*Ref.: TEM 6260A0000-01  
No specific CMM / CRM reference number*

Function: To keep and protect GSEs in box

- Part of Transport Case PN: 6904A9800-01

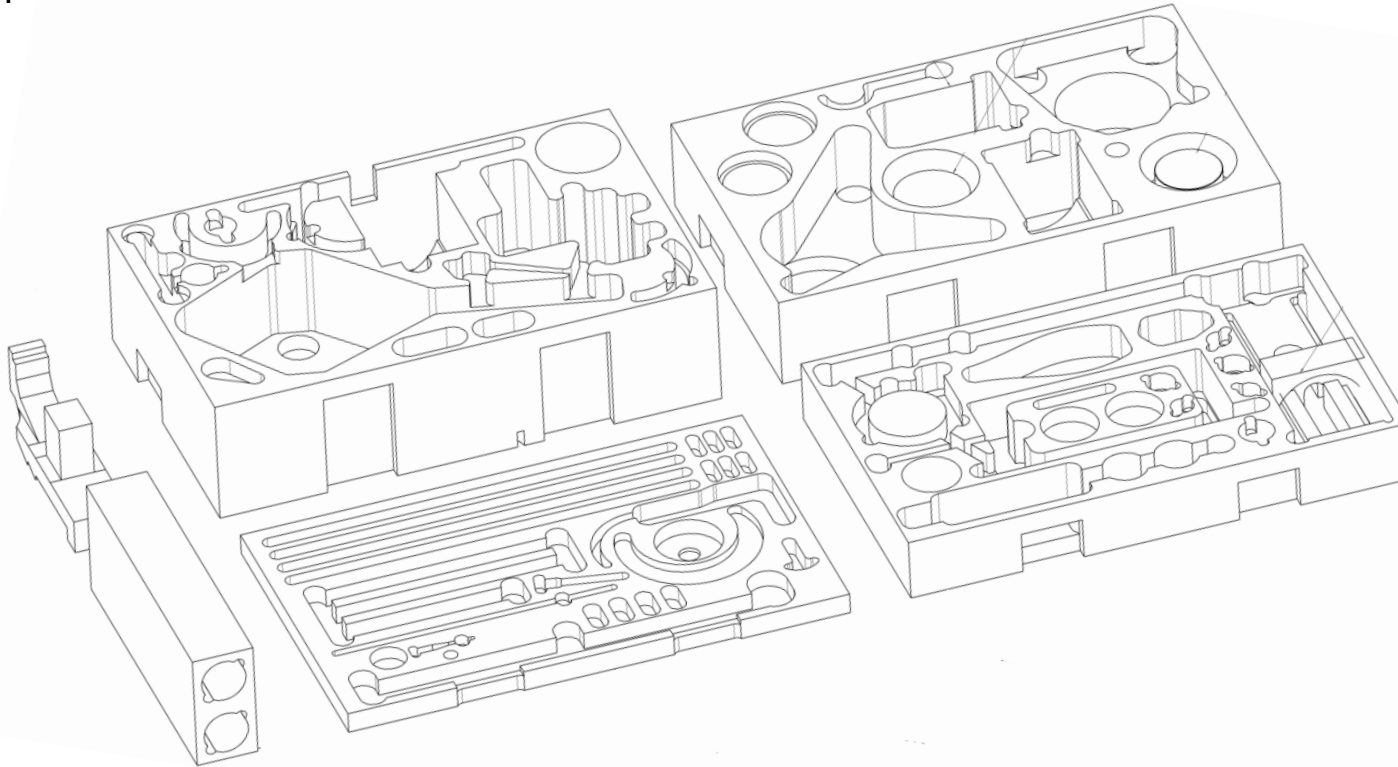


# A350 NLG Liebherr Tooling Catalogue

## Sleeve PN: 5035-0201W50

✗	Line Maintenance	✓	4816A0000-06
✓	Heavy Maintenance	✓	6406A0000-01

**Ref.: TEM 5035-0201**

 Function: To install slotted ring on main fitting

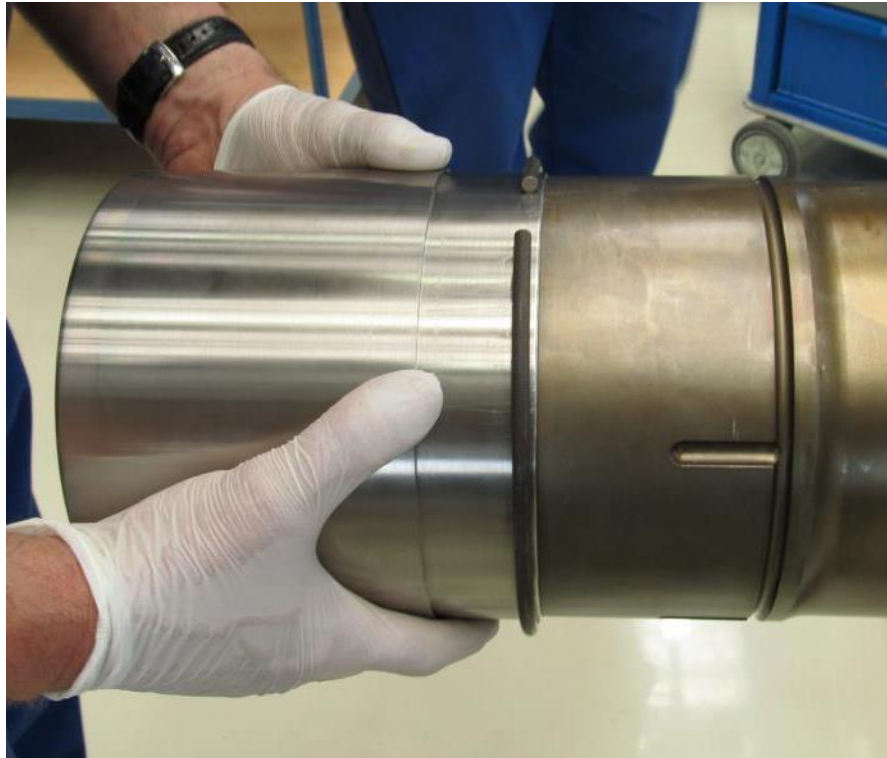



# A350 NLG Liebherr Tooling Catalogue

## Ground Lock Pin PN: 5311A0000-01

✓	Line Maintenance	✓	4816A0000-06
✗	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 5311A0000-01

Function: To lock NLG on ground



 
 
# A350 NLG Liebherr Tooling Catalogue

## Protecting Cover PN: 6026-4101

✓	Line Maintenance	✓	4816A0000-06
✗	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 6026-4101

Function: To protect wheel axle

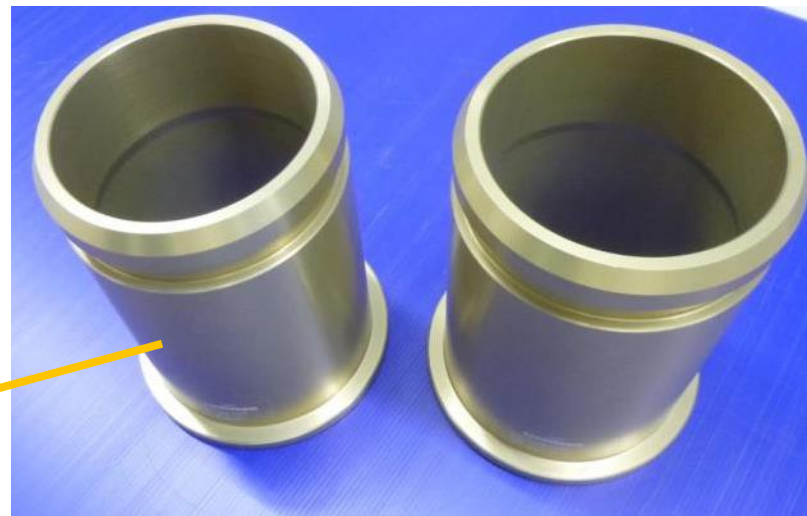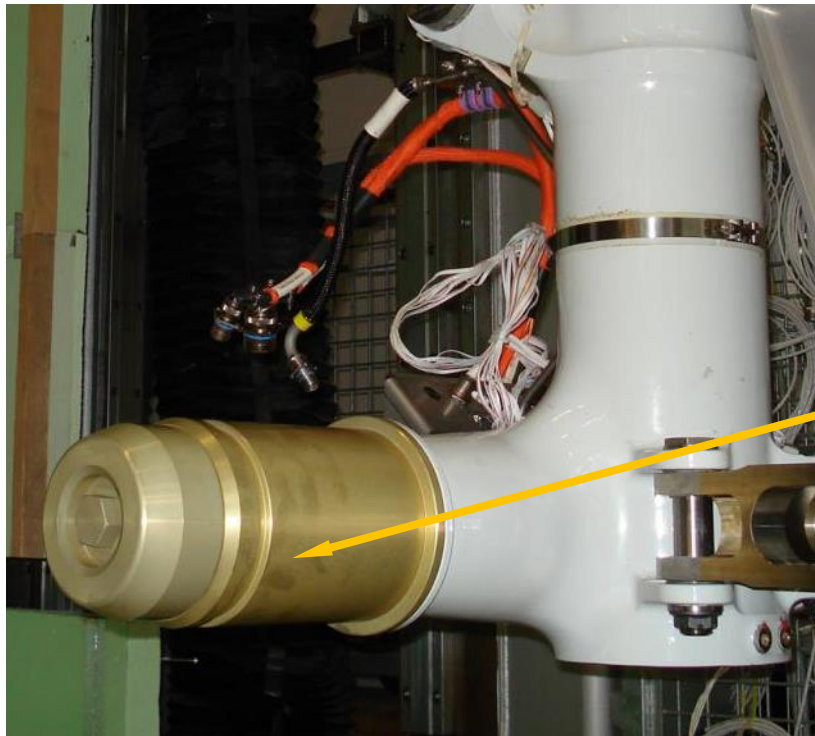


# A350 NLG Liebherr Tooling Catalogue

## Protecting Cover PN: 6026-4102

✓	Line Maintenance	✓	4816A0000-06
✗	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 6026-4102

 Function: To protect axle thread

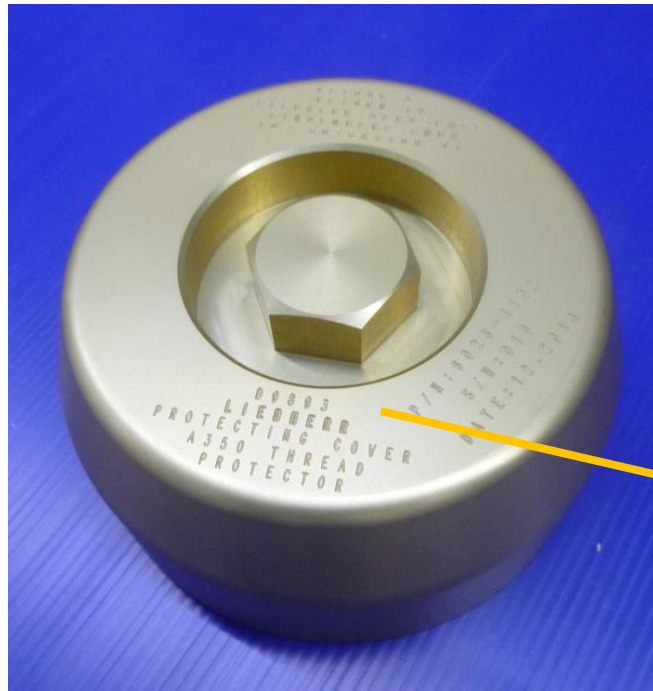



# A350 NLG Liebherr Tooling Catalogue

## Clamp Fixture PN: 6026A4400-01

✓	Line Maintenance	✓	4816A0000-06
✗	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 6026A4400-01

  Function: To clamp the lower drag stay during installation

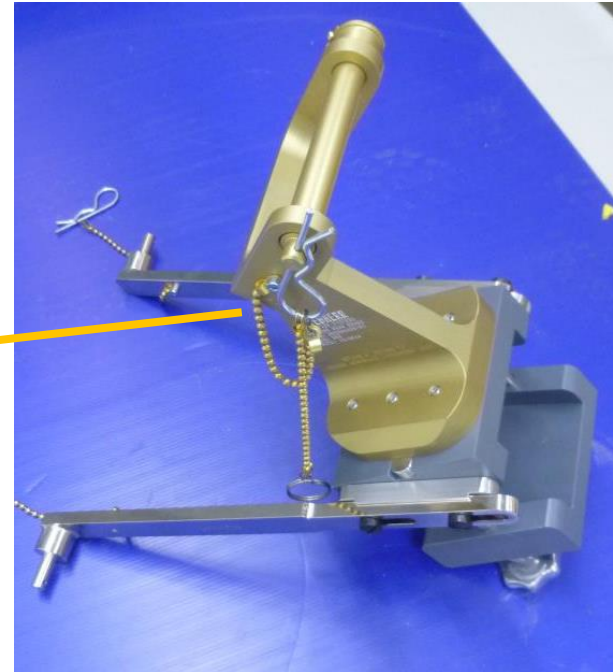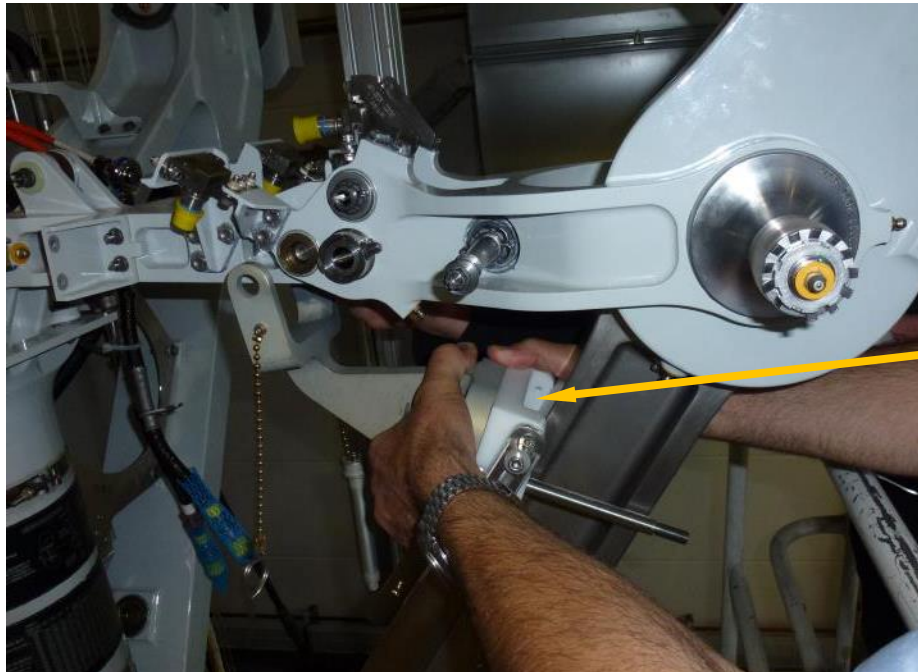

# A350 NLG Liebherr Tooling Catalogue

## Assembly Punch PN: 6260-0002

✓	Line Maintenance	✓	4816A0000-06
✗	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 6260-0002

Function: To support torque link during removal and installation



# A350 NLG Liebherr Tooling Catalogue

## Socket Wrench PN: 6260-0005

✓	Line Maintenance	✓	4816A0000-06
✗	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 6260-0005

Function: Removal and installation steering actuator



Tool necessary for LLI SB-4816A-32-16 & SB-6406A-32-03 & SB-6406B-32-01

 
# A350 NLG Liebherr Tooling Catalogue

## Assembly Tool PN: 6260A0100-01

✓	Line Maintenance	✓	4816A0000-06
✗	Heavy Maintenance	✗	6406A0000-01

Ref.: TEM 6260A0100-01

Function: Guide cone for removal and installation of upper apex pin

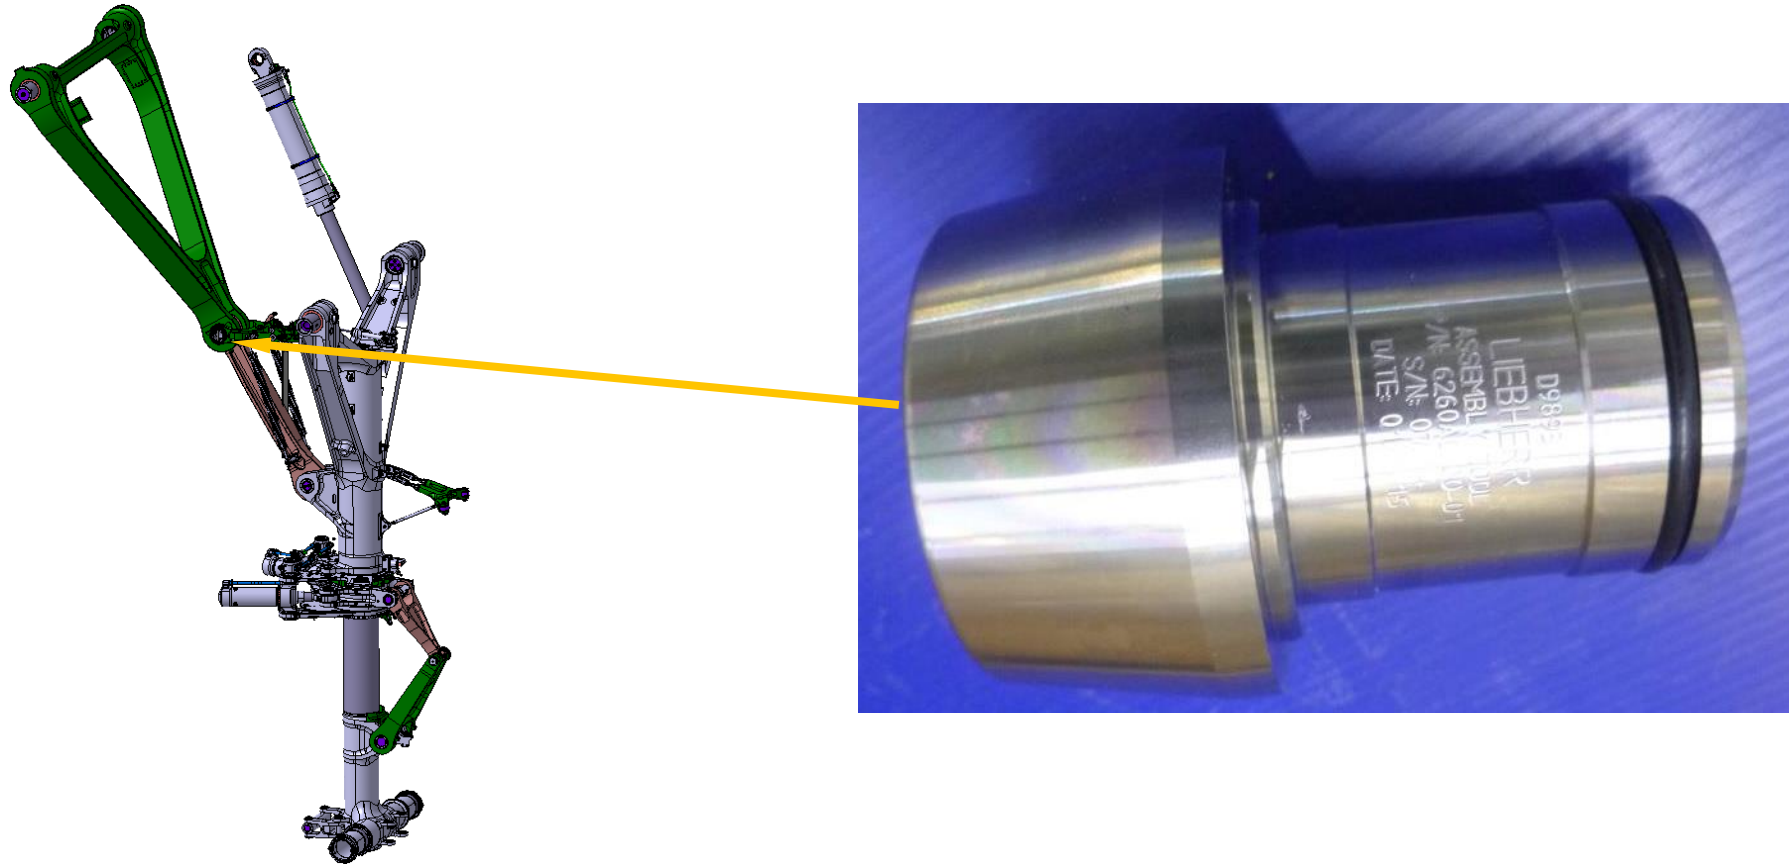



# A350 NLG Liebherr Tooling Catalogue

## Assembly Tool PN: 6904A0100-01

✓	Line Maintenance	✗	4816A0000-06
✗	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 6904A0100-01

  Function: Guide cone for removal and installation upper apex pin

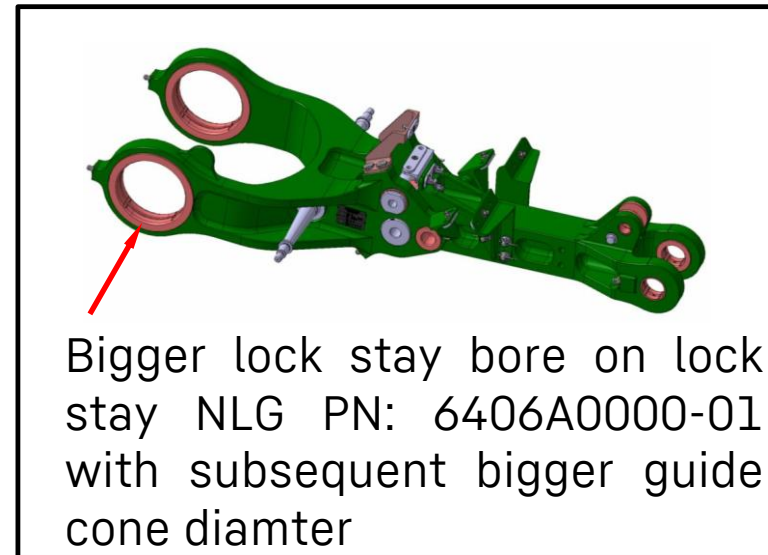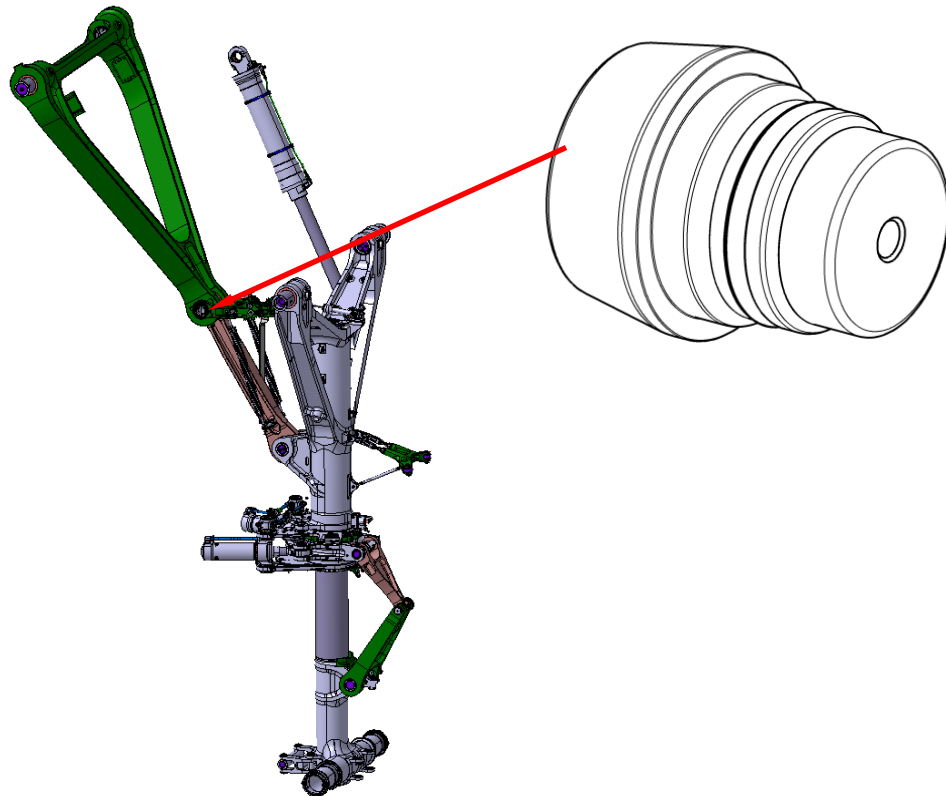

Drag stay apex pin bore diameter increased 10mm for A350 -1000




A350 NLG Liebherr Tooling Catalogue  
**Assembly Tool PN: 6260A0200-01**

✓	Line Maintenance	✓	4816A0000-06
✗	Heavy Maintenance	✓	6406A0000-01

**Ref.: TEM 6260A0200-01**

 Function: Guide cone for removal and installation lower apex pin

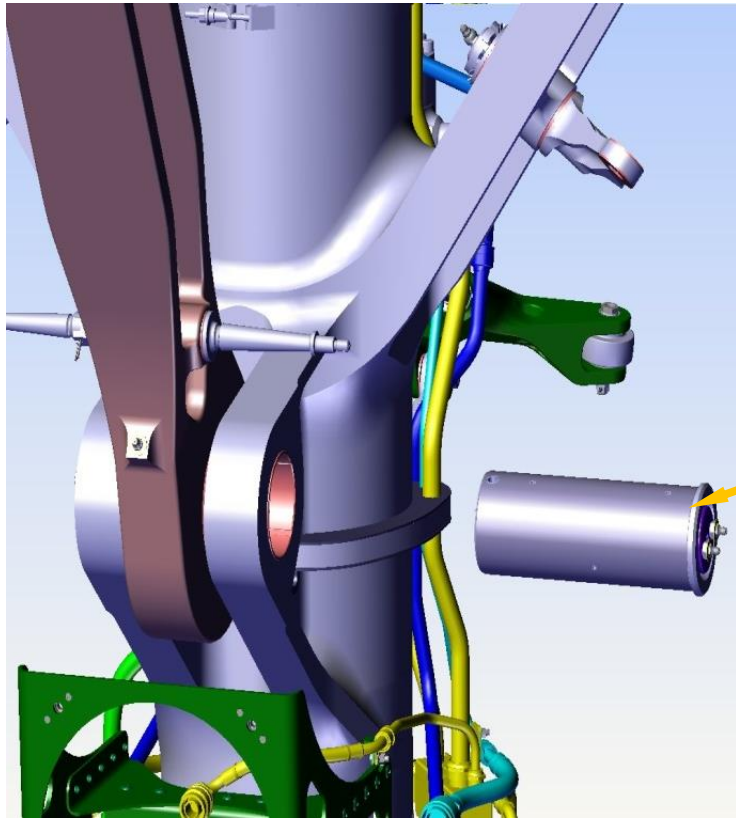



# A350 NLG Liebherr Tooling Catalogue

## Assembly Tool PN: 6260A0300-01

✓	Line Maintenance	✓	4816A0000-06
✗	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 6260A0300-01

  Function: Guide cone for removal/installation of torque link bolts

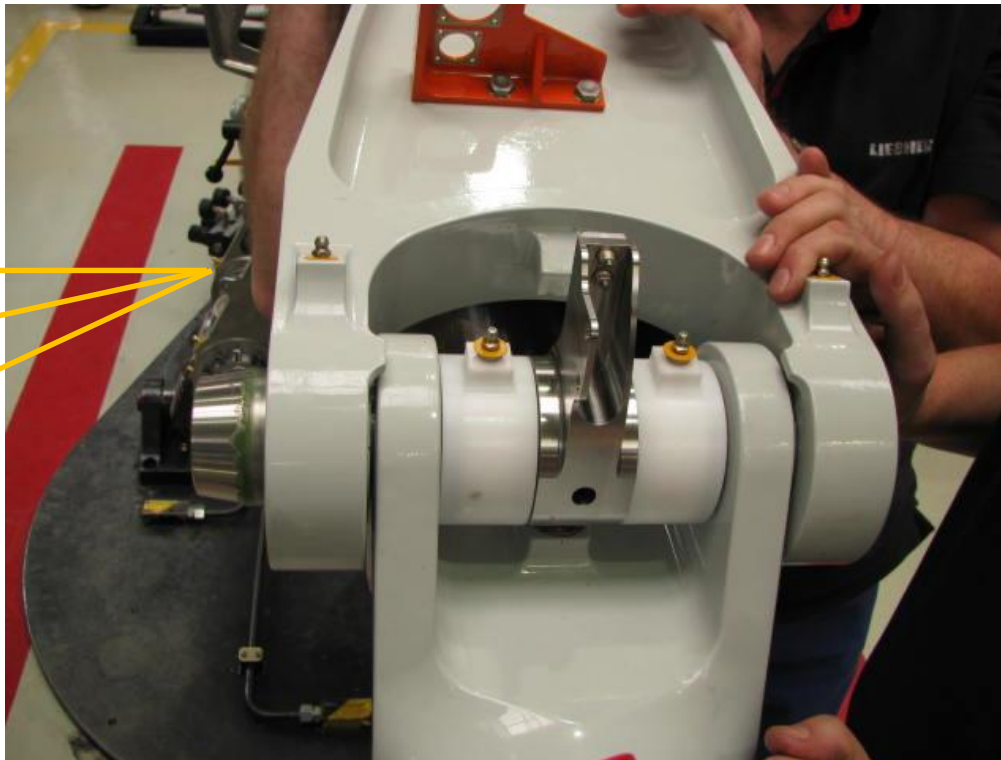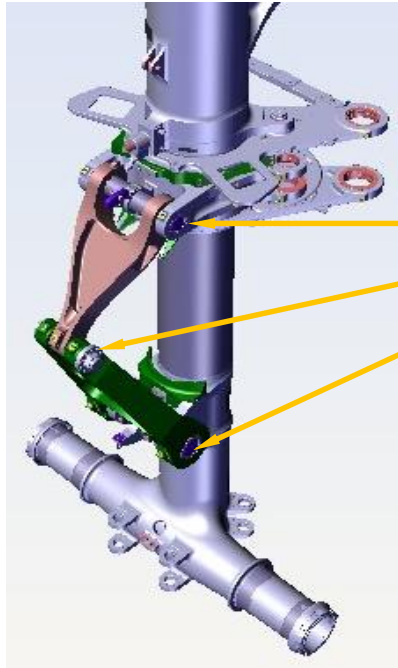


# A350 NLG Liebherr Tooling Catalogue

## Socket Wrench PN: 6260A0400-01

✓	Line Maintenance	✓	4816A0000-06
✓	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 6260A0400-01

 Function: To open main nut on shock strut assembly

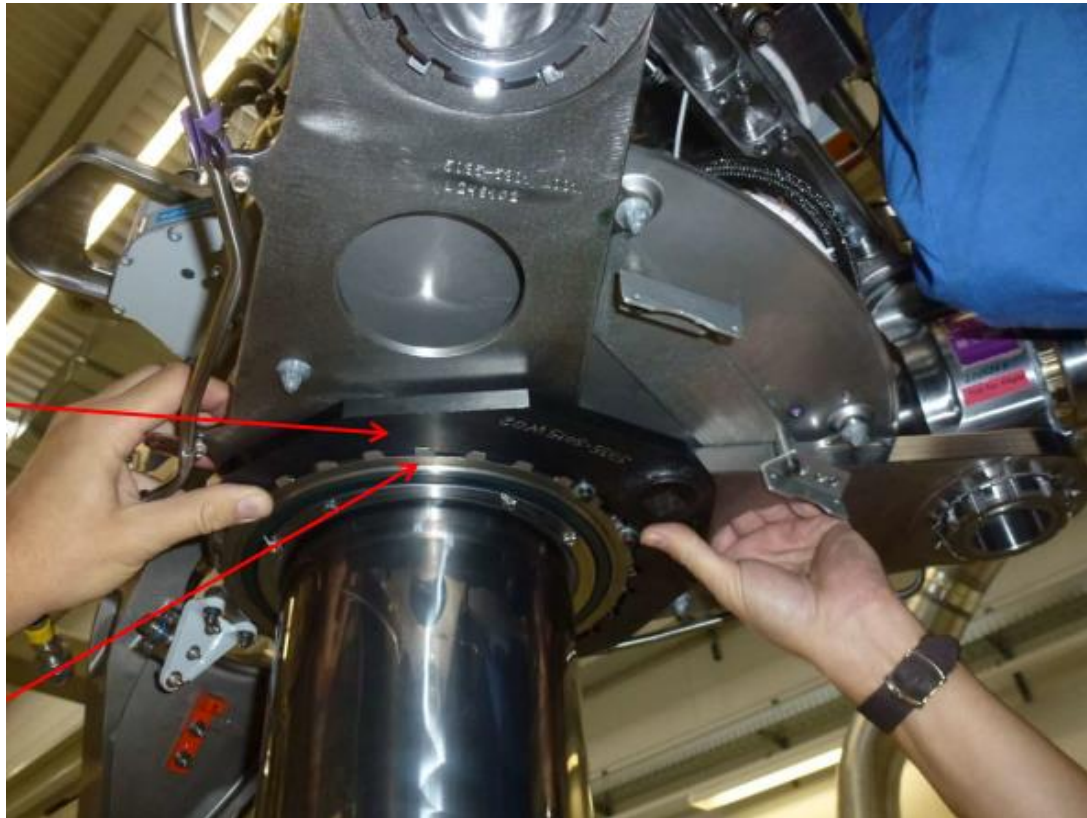

# A350 NLG Liebherr Tooling Catalogue

## Guide Bolt PN: 6260A0500-01

✓	Line Maintenance	✓	4816A0000-06
✗	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 6260A0500-01

Function: Guide bolt for installation retraction actuator



 
# A350 NLG Liebherr Tooling Catalogue

## Guide Bolt PN: 6260A0600-01

✓	Line Maintenance	✓	4816A0000-06
✗	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 6260A0600-01

Function: Guide bolt for removal and installation of steering actuator

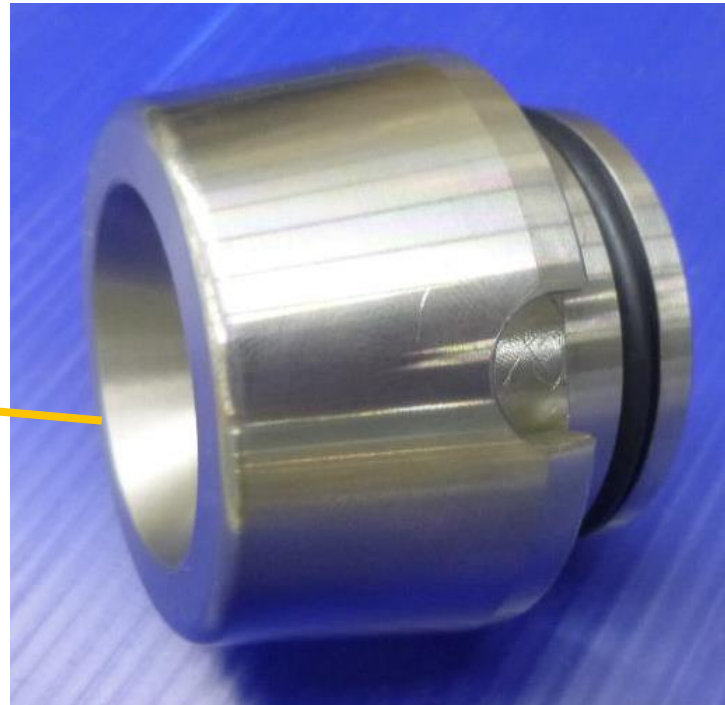

# A350 NLG Liebherr Tooling Catalogue

## Puller PN: 6260A0700-01

✓	Line Maintenance	✓	4816A0000-06
✗	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 6260A0700-01

Function: Removal and installation of steering actuator bolt



 
# A350 NLG Liebherr Tooling Catalogue

## Socket Wrench PN: 6260A0800-01

✓	Line Maintenance	✓	4816A0000-06
✗	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 6260A0800-01

Function: To break-free retraction actuator bolt before removal

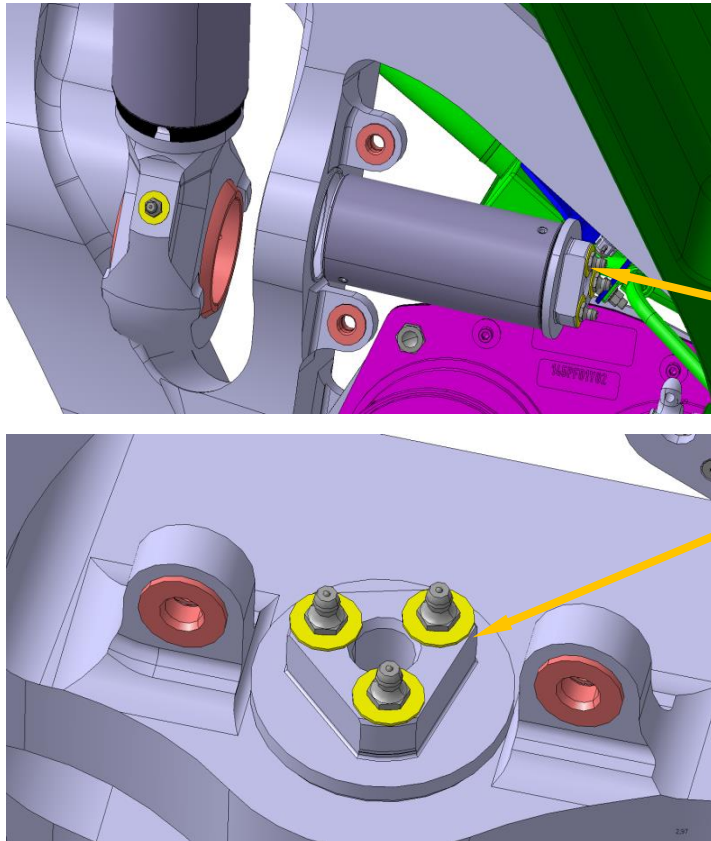



# A350 NLG Liebherr Tooling Catalogue

## Removing Tool PN: 6260B0900-01

Function: Removal of retraction actuator bolt

✓	Line Maintenance	✓	4816A0000-06
✗	Heavy Maintenance	✓	6406A0000-01

  Ref.: TEM 6260B0900-01

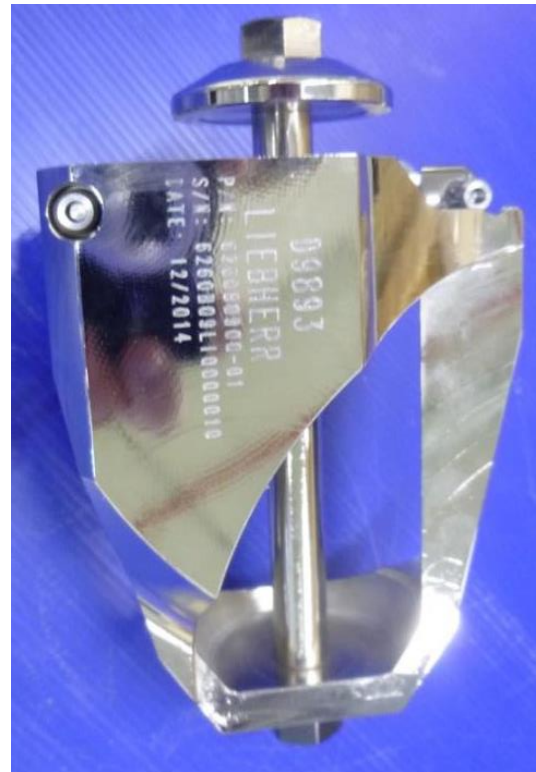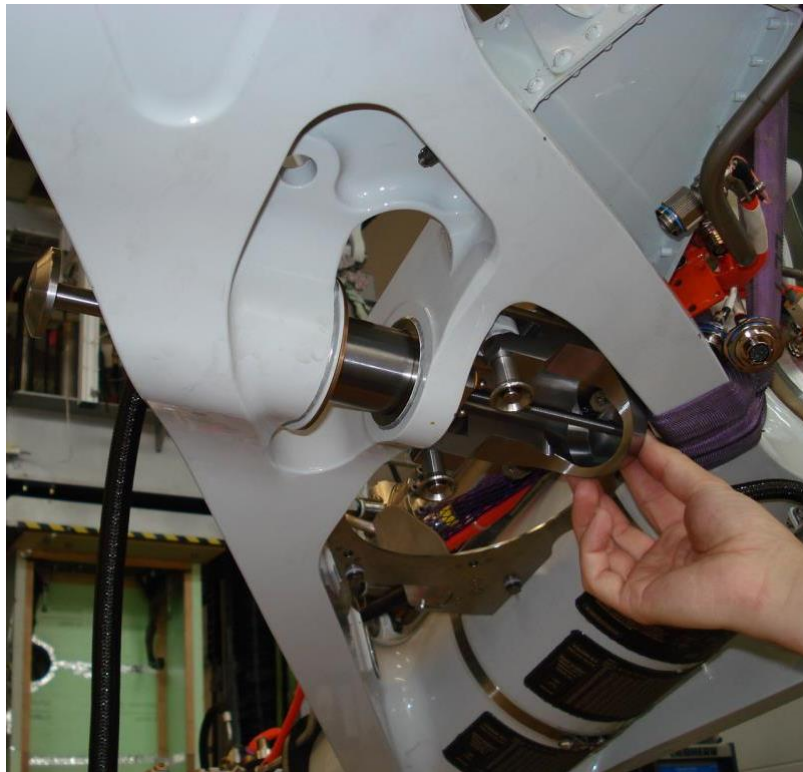




# A350 NLG Liebherr Tooling Catalogue

## Puller Extract PN: 6260A1000-01

✓	Line Maintenance	✓	4816A0000-06
✗	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 6260A1000-01

 Function: Removal and installation torque link bolts



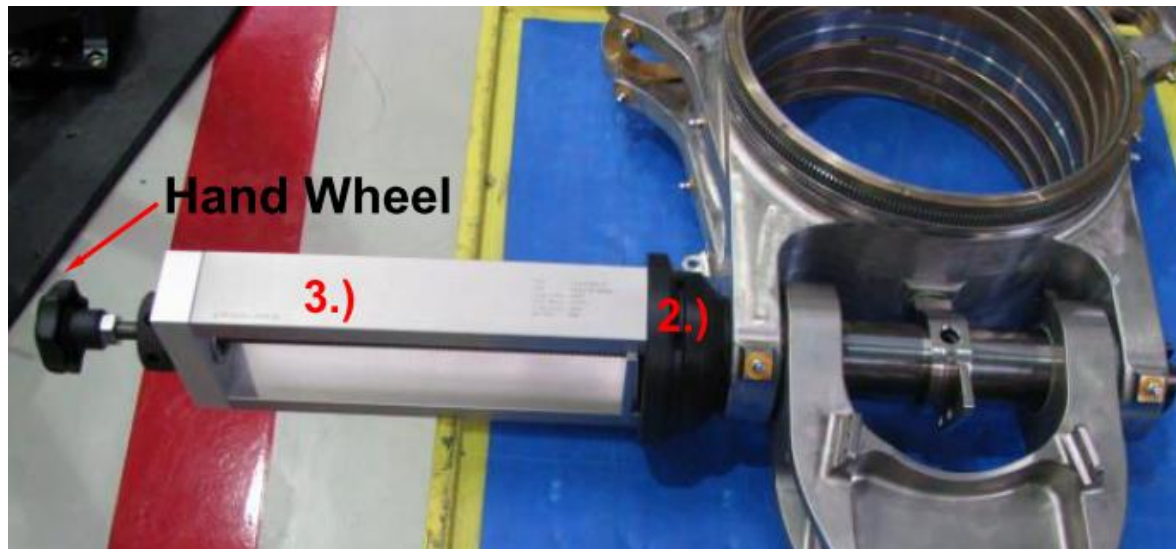


A350 NLG Liebherr Tooling Catalogue  
**Assembly Tool PN: 6260A2000-01**


✓	Line Maintenance	✓	4816A0000-06
✗	Heavy Maintenance	✗	6406A0000-01

**Ref.: TEM 6260A2000-01**

   Function: RI apex bolts and torque links

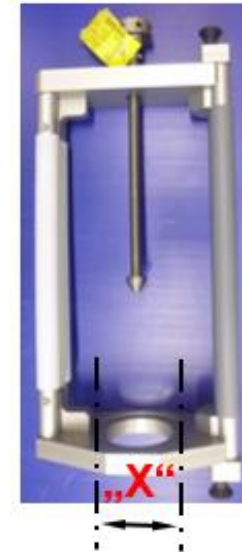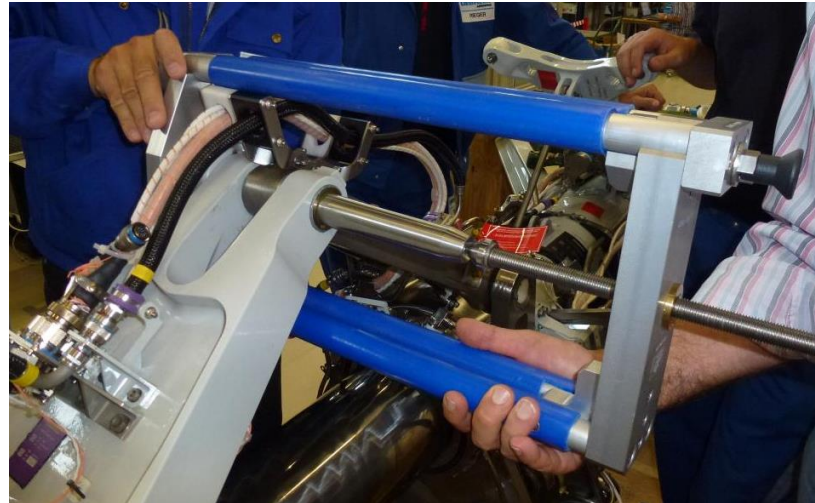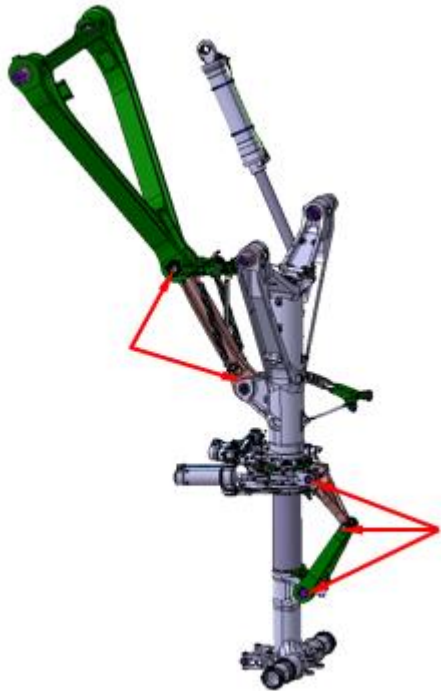

- Note: Part of GSE SET PN: 6260A0000-02
- Tool valid for -800/-900 only. No -1000 application




  
 Bigger lock stay bore on lock stay NLG  
 PN: 6406A0000-01 with subsequent  
 bigger guide cone diameter

A350 NLG Liebherr Tooling Catalogue  
**Assembly Tool PN: 6904A2000-01**

✓	Line Maintenance	✓	4816A0000-06
✗	Heavy Maintenance	✓	6406A0000-01

**Ref.: TEM 6260A2000-01**

   Function: RI apex bolts and torque links

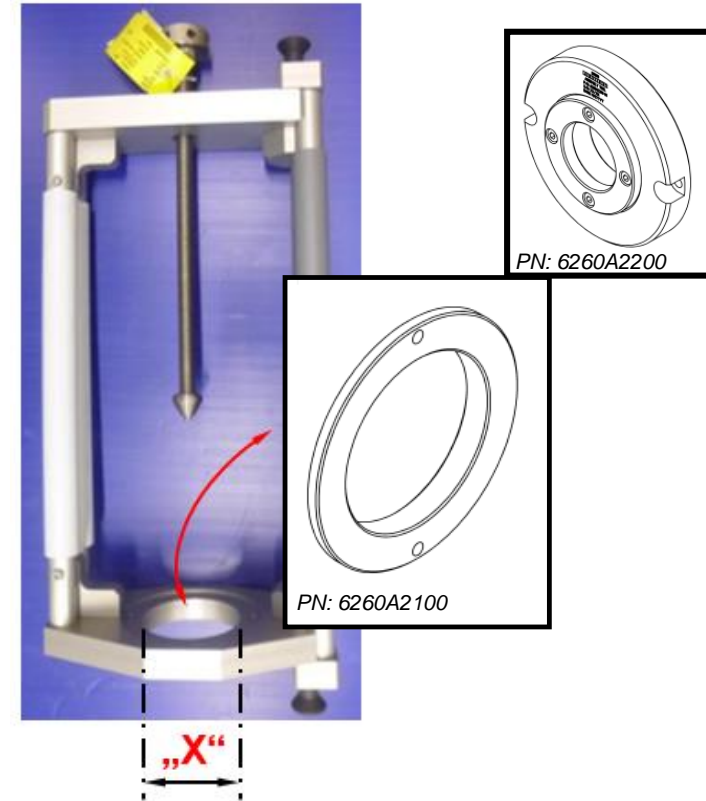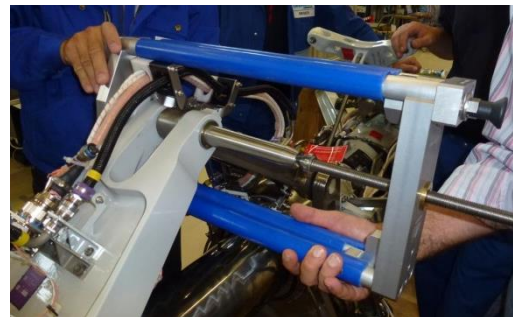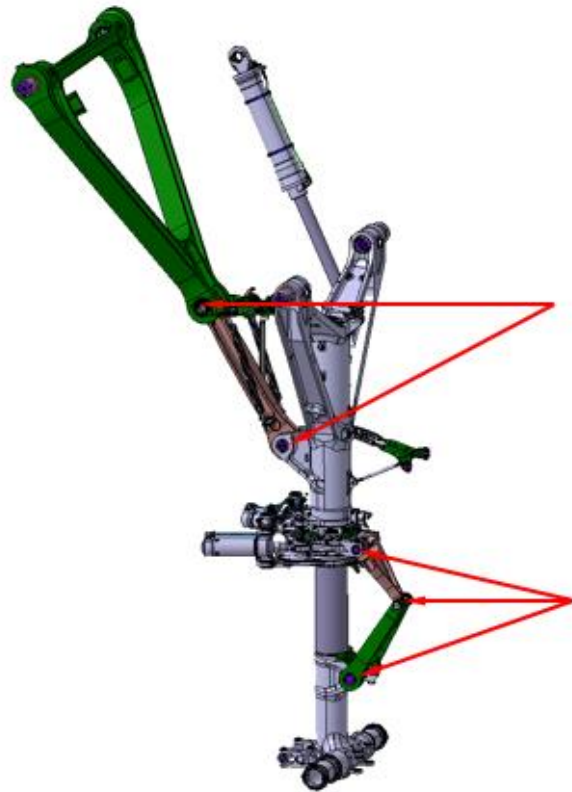

Increased dimension „X“ (bore diameter). Tool valid for -800/-900/-1000


# A350 NLG Liebherr Tooling Catalogue
 
## Assembly Tool PN: 6260-0001

✓	Line Maintenance	✓	4816A0000-06
✗	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 6260-0001

Function: Installation torque link apex pin

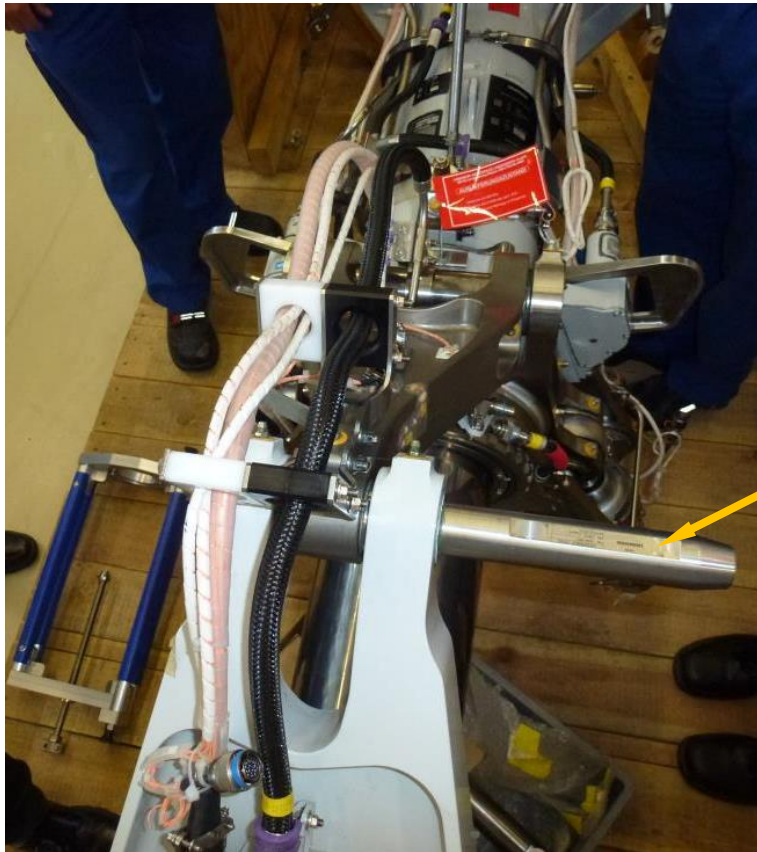


# A350 NLG Liebherr Tooling Catalogue

## Cover PN: 6260A3000-01

✓	Line Maintenance	✓	4816A0000-06
✓	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 6260A3000-01

 Function: To support lower steering plate during removal

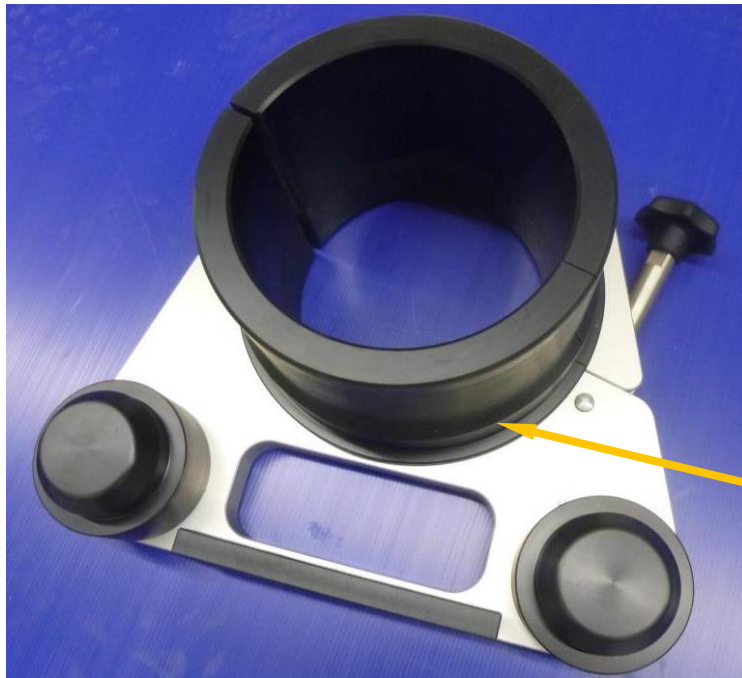

Do not change the dimension „Y“ of plastic cover by yourself to prevent the shock strut from possible damage. A/C might be needs to be slightly lifted for tool installation.


# A350 NLG Liebherr Tooling Catalogue
 
## Drawing Tool PN: 6260A4000-01

Function: Spring removal and installation tool

✓	Line Maintenance	✓	4816A0000-06
✗	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 6260A4000-01

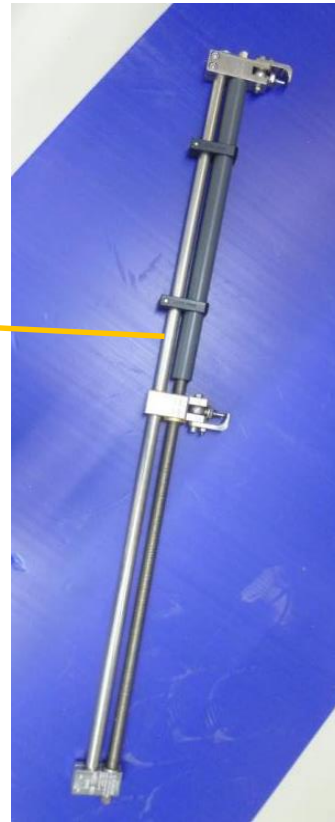


# A350 NLG Liebherr Tooling Catalogue

## Removing Tool PN: 6260B5100-01

✗	Line Maintenance	✓	4816A0000-06
✓	Heavy Maintenance	✓	6406A0000-01

*Update of TEM in Process*

 Function: To turn the slider during removal and installation

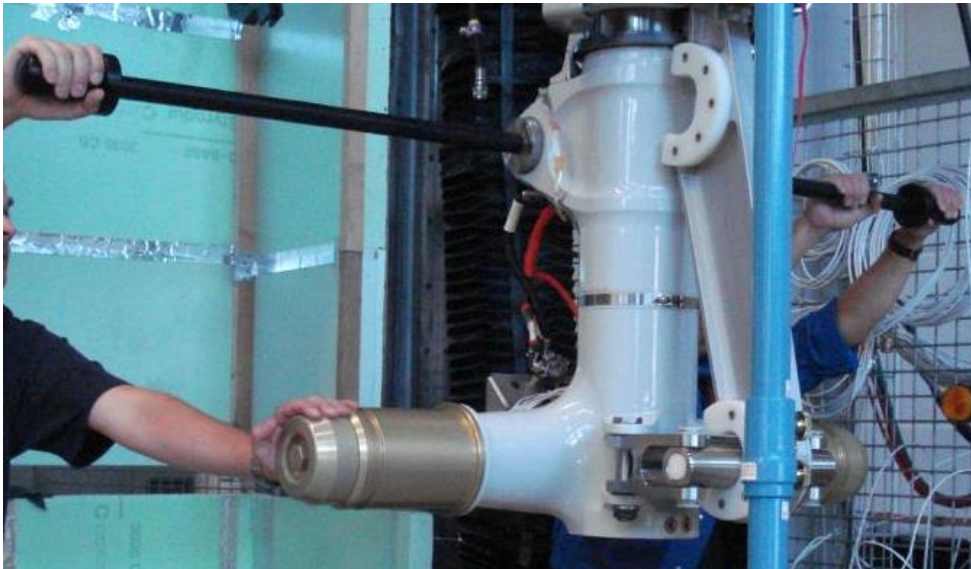


# A350 NLG Liebherr Tooling Catalogue

## Guide Block PN: 6904A1100-01

✓	Line Maintenance	✓	4816A0000-06
✗	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 6904A1100-01

 Function: To apply correct amount of oil during servicing

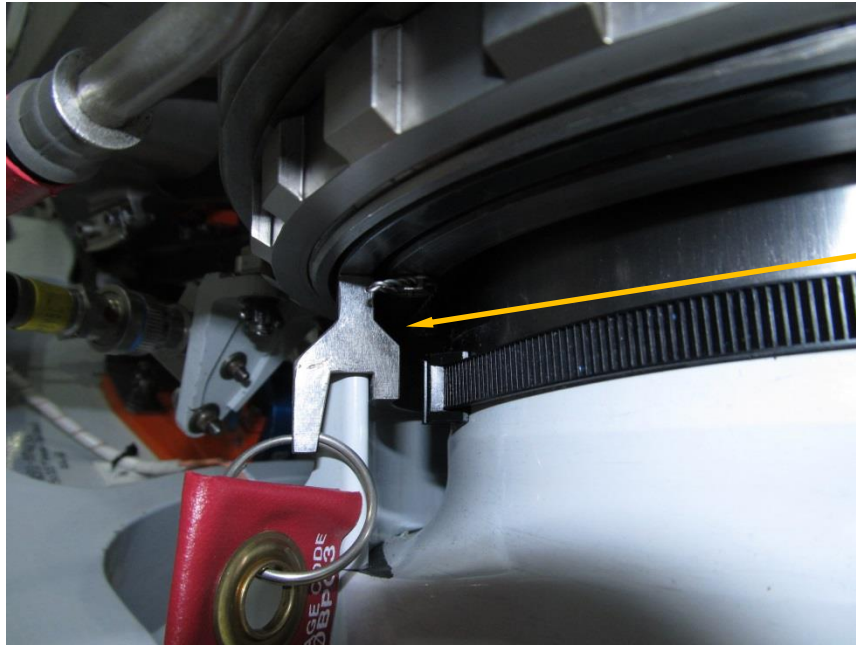







# A350 NLG Liebherr Tooling Catalogue

## Installation Tool PN: 6260A6500-01

✗	Line Maintenance	✓	4816A0000-06
✓	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 6260A6500-01

    Function: To avoid shearing of O-Ring during installation

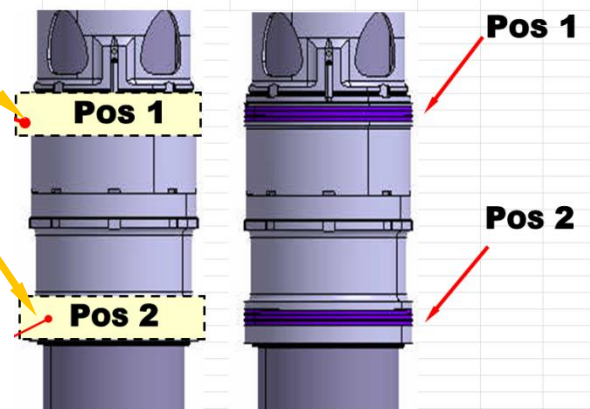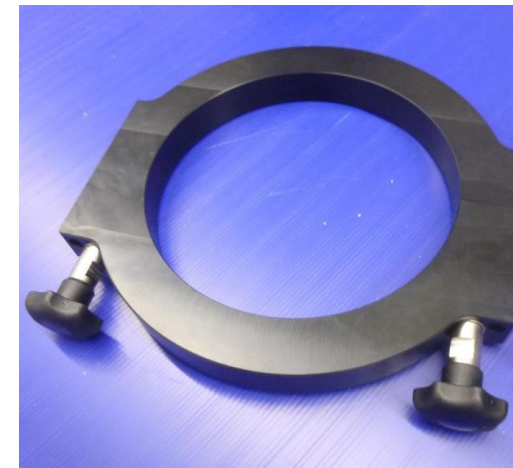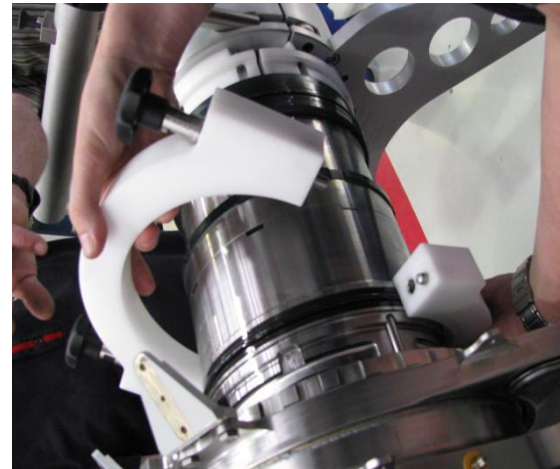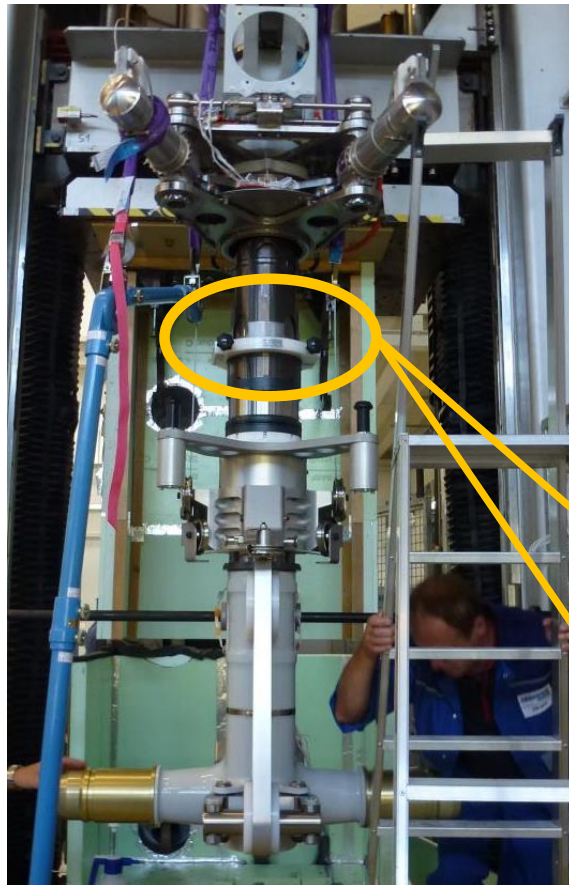

In case tooling is not installed, seal will be sheared during pushing the slider back to main fitting.



# A350 NLG Liebherr Tooling Catalogue
  
## Removing Tool PN: 6260A6600-01

Function: Ring removing tool

✗	Line Maintenance	✓	4816A0000-06
✓	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 6260A6600-01

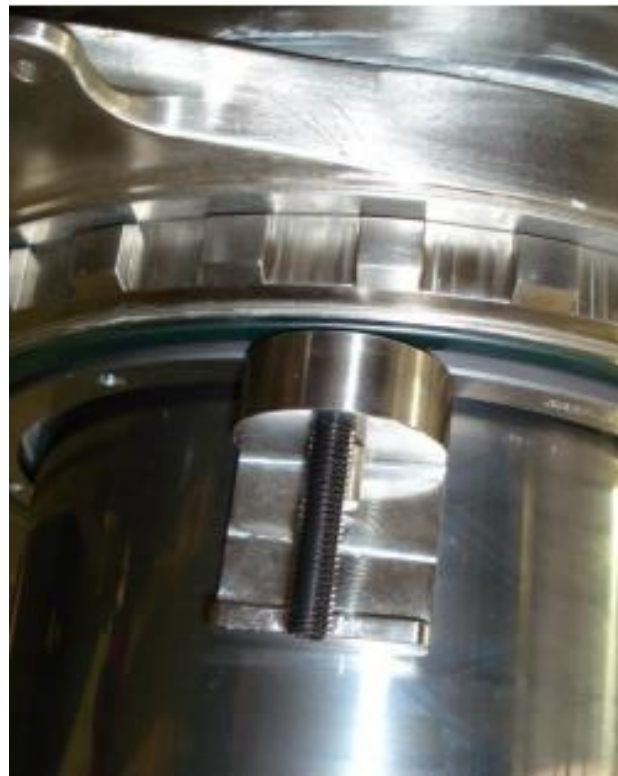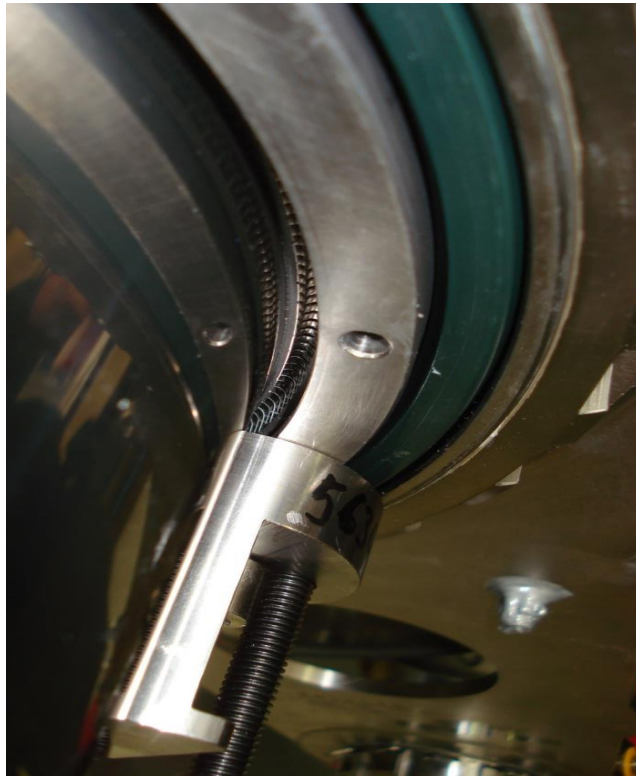


# A350 NLG Liebherr Tooling Catalogue

## Installation Jig PN: 6260A6800-01

✗	Line Maintenance	✓	4816A0000-06
✓	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 6260A6800-01

 Function: Protection sleeves to install slider into main fitting

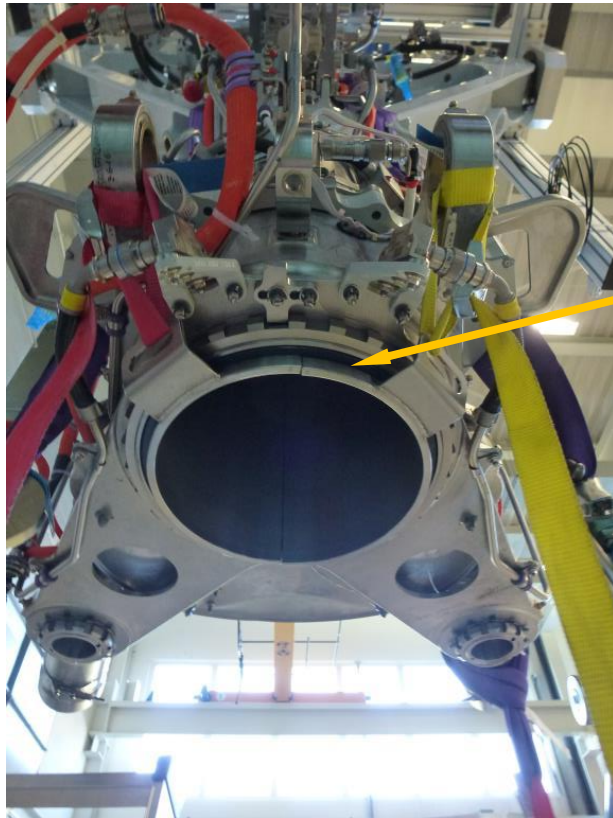


# A350 NLG Liebherr Tooling Catalogue

## Lifting Beam PN: 6260A6000-01

✗	Line Maintenance	✓	4816A0000-06
✓	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 6260A6000-01

 Function: Lifting of NLG sliding tube into main fitting

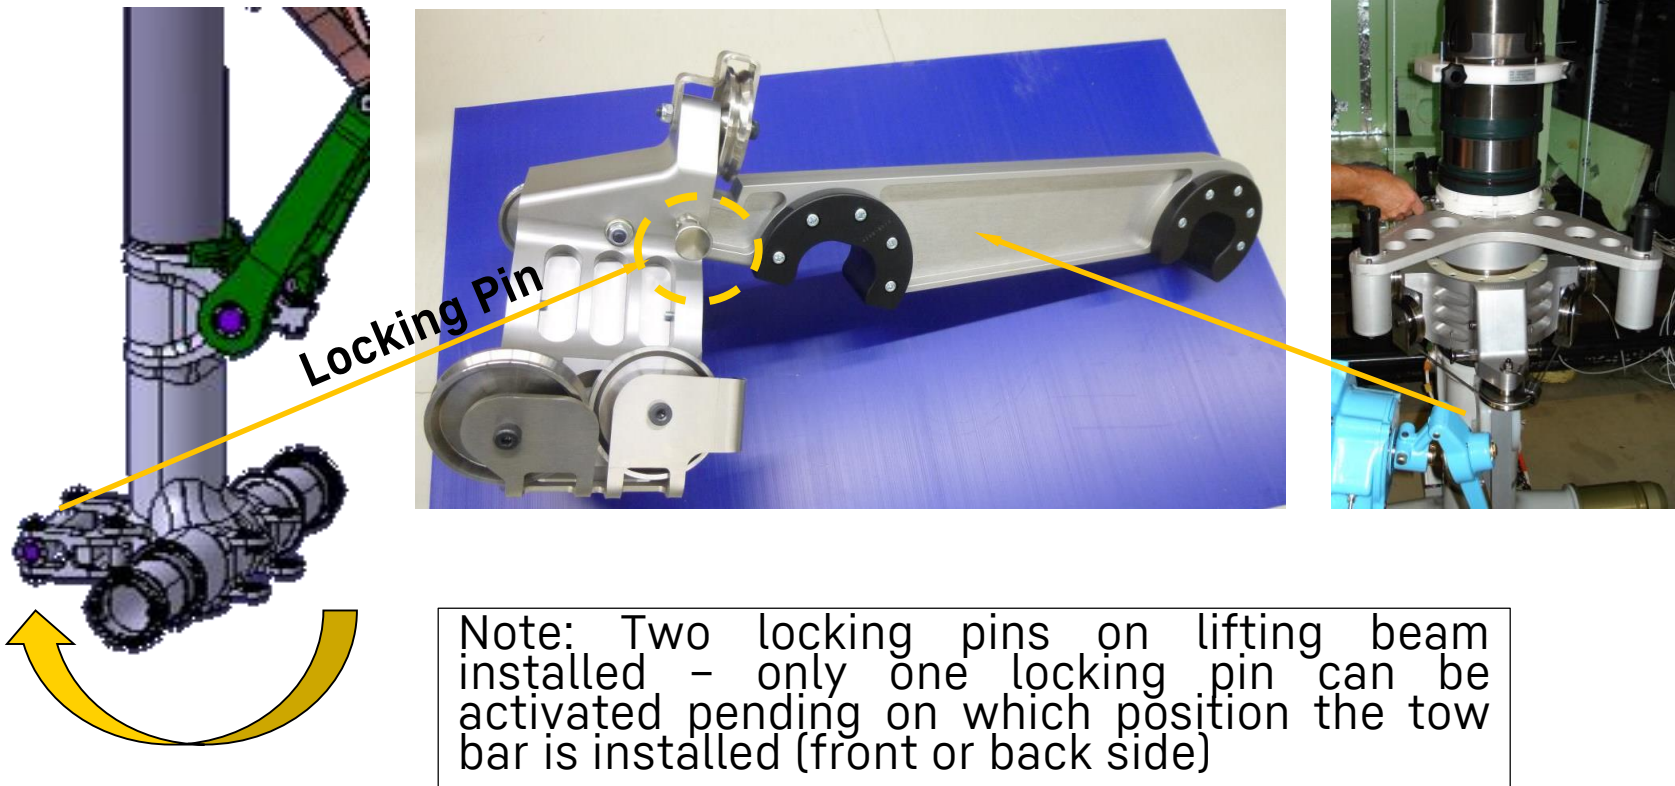

Note: Two locking pins on lifting beam installed - only one locking pin can be activated pending on which position the tow bar is installed (front or back side)


# A350 NLG Liebherr Tooling Catalogue
 
## Didsbury Hoist Kit (Not Included)

Function: To support lower steering plate during removal


AIRCRAFT APPLICATION SHEET FOR: 42/674 **didsbury**  
 World class fitting and tooling solutions  
**A350 NLG SLIDING TUBE R/I HOIST KIT**  
 Revision 2. Includes 41/163  
 Didsbury Engineering Co Ltd  
 Telephone: +44 (0)161 486 2200  
 Facsimile: +44 (0)161 486 2211  
 Email: sales@didsbury.com  
 Web: www.didsbury.com

ITEM NO.	PART No.	DESCRIPTION	QTY.
1	42/7	WINDING MECHANISM	1
2	41/100	610mm EXTENSION TUBE	2
3	41/106	457mm EXTENSION TUBE	1
4	41/110	TUBE COUPLING	1
5	42/672	ANGLE CHANGER	1
5	42/639	TOP SHEATH ASSEMBLY	1
7	42/494	HOOK	1
8	42/20	CABLE ASSEMBLY (FOR REFERENCE ONLY)	1
9	41/163	9" WINDING HANDLE	1

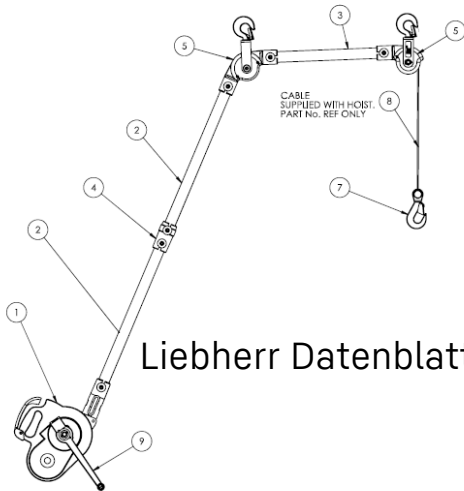

Liebherr Datenblatt ID 11044715

 SWL: 254 Kg  
 WEIGHT: 18 Kg

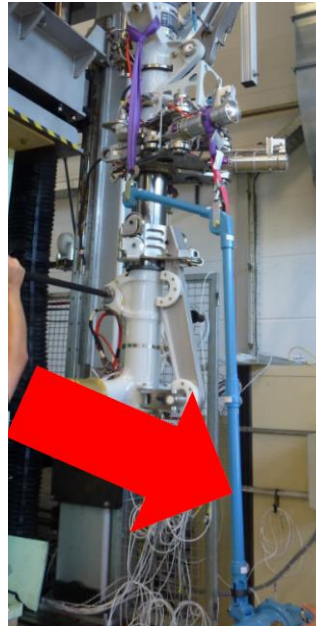


Didsbury Engineering Co Ltd

Telephone: +44 (0)161 486 2200  
 Facsimile: +44 (0)161 486 2211  
 Email: sales@didsbury.com  
 Web: www.didsbury.com

HOIST KIT TO BE ORDERD SEPERATLY  
 @ Didsbury directly. Liebherr  
 Reference Number is: 6260A6000M01

✗	Line Maintenance	✓	4816A0000-06
✓	Heavy Maintenance	✓	6406A0000-01

 Ref.: TEM 6260A3000-01

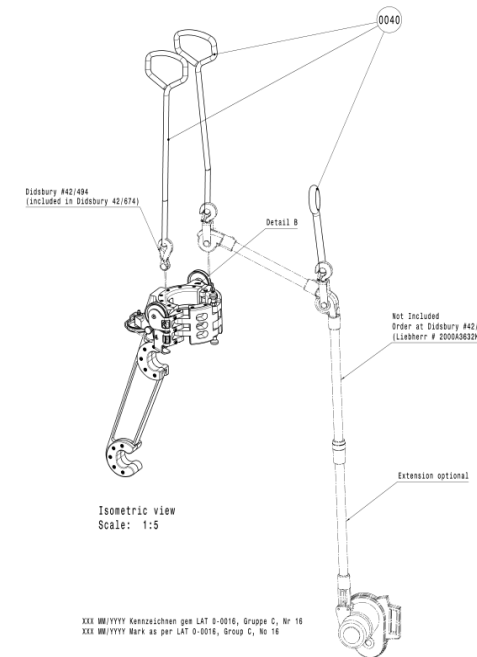

Minimum 800 mm clearance from ground to jacking dome is needed to remove sliding tube (total).


# A350 NLG Liebherr Tooling Catalogue
 
## Holding Tool PN: 6260A7000-01

✗	Line Maintenance	✓	4816A0000-06
✓	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 6260A7000-01

Function: Jig to hold sliding tube

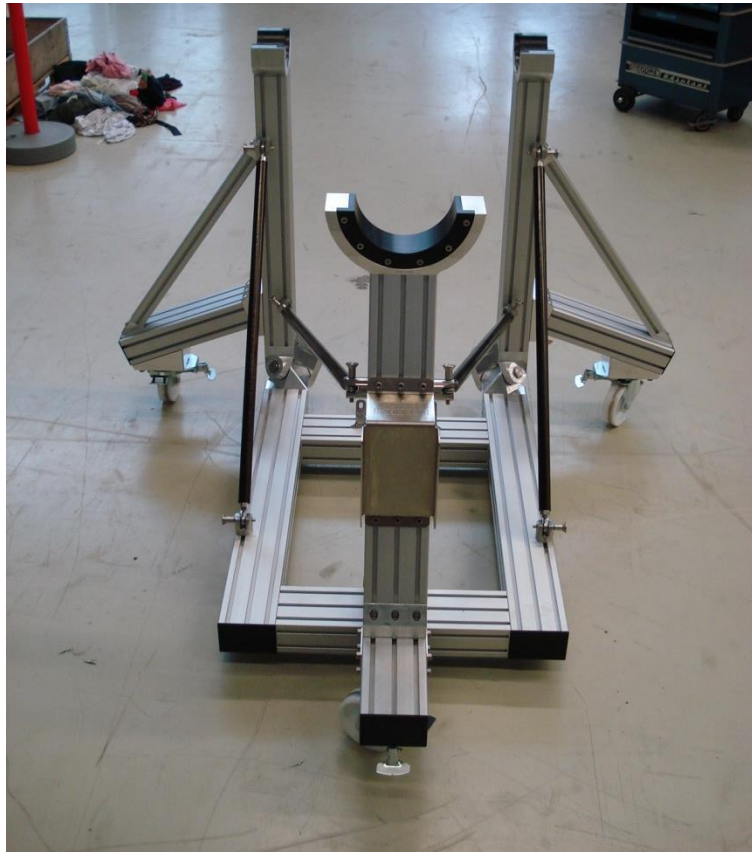

# A350 NLG Liebherr Tooling Catalogue

## Holding Fixture PN: 6260A8000-01

✓	Line Maintenance	✓	4816A0000-06
✗	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 6260A8000-01

Function: Shim installation tool



- Tooling was original designed to install the shims on A350-800/900 only with smaller bolt system and subsequent shim diameter.
- On A350 common NLG the shim does not fit exactly into the radius of the tooling, but tooling remains fully functional, positioning of shim into gap is possible as well.

# A350 NLG Liebherr Tooling Catalogue

## Extracting Tool PN: 6260A9000-01

✓	Line Maintenance	✓	4816A0000-06
✗	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 6260A9000-01

Function: Removal anti rotation pin





 
# A350 NLG Liebherr Tooling Catalogue

## Removing Tool PN: 6260A6700-01

✗	Line Maintenance	✓	4816A0000-06
✓	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 6260A6700-01

Function: Metering pin screw installation

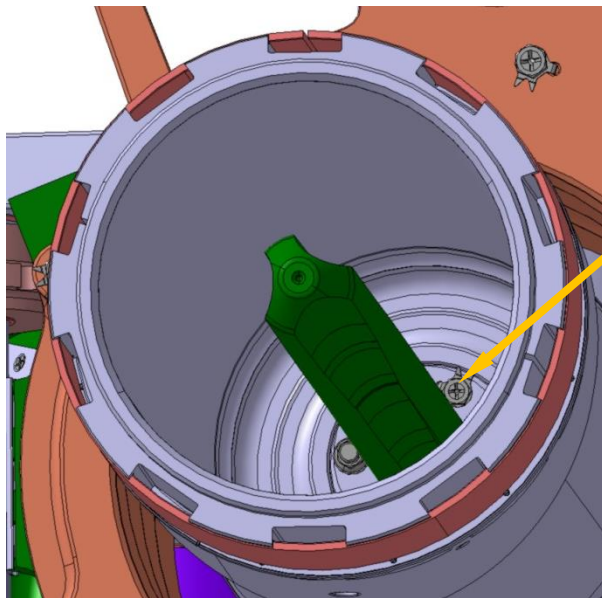





# A350 NLG Liebherr Tooling Catalogue

## Installation Tool PN: 6904A5200-01

✗	Line Maintenance	✓	4816A0000-06
✓	Heavy Maintenance	✓	6406A0000-01

*Ref.: TEM 6260A5200-01  
Update of TEM to 6904A5200-01 in Process*

    Function: Positioning of slider during installation into main fitting

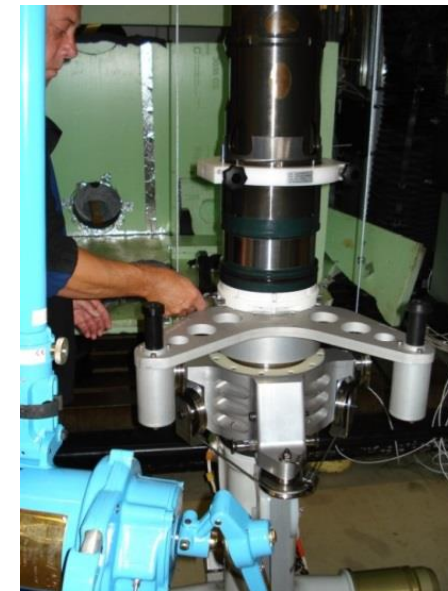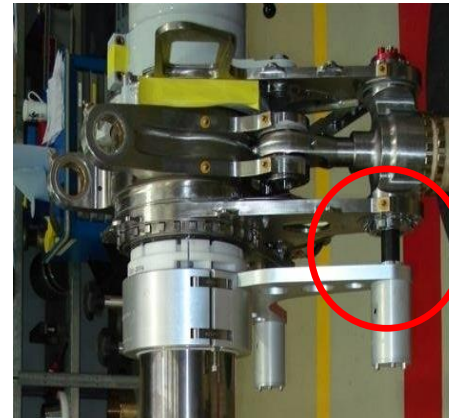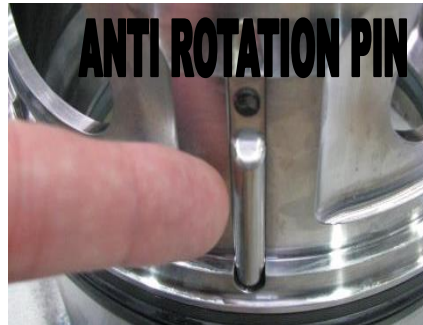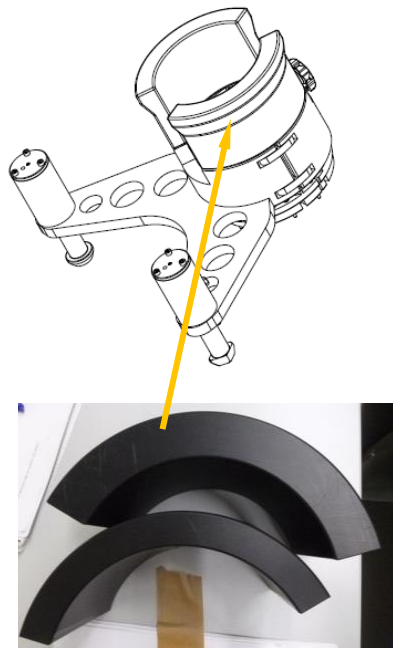

- Note: Tool modified from PRE PN: 6260A5200-01 (non procurable) into POST PN: 6904A5200-01 (Drilling pitch of attachment screws have changed) - PN: 6904A52000-01 validated and procurable
- Note: Spacer Piece PN: 6904-5212 is added to the tooling helping to ease installation of NLG


# A350 NLG Liebherr Tooling Catalogue
 
## Mounting Sleeve PN: 5035-0020W01

✗	Line Maintenance	✓	4816A0000-06
✓	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 5035-0020

Function: Calibration of cuff seals

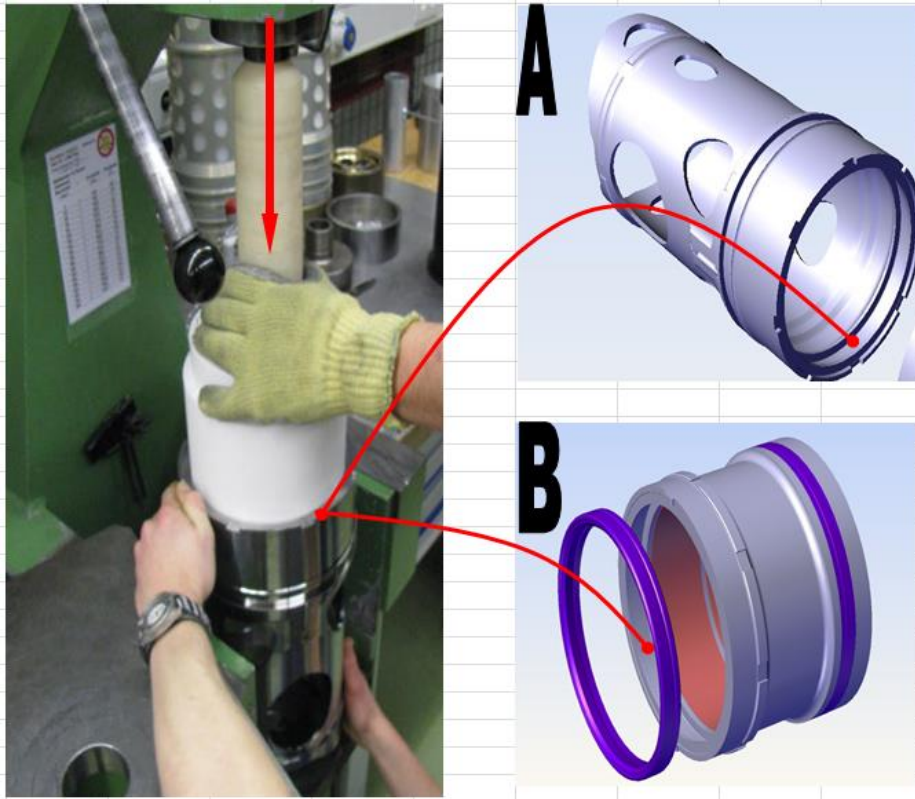


# A350 NLG Liebherr Tooling Catalogue

## Mounting Tool PN: 5035-0023W01

✗	Line Maintenance	✓	4816A0000-06
✓	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 5035-0023

 Function: Steering cam seal installation

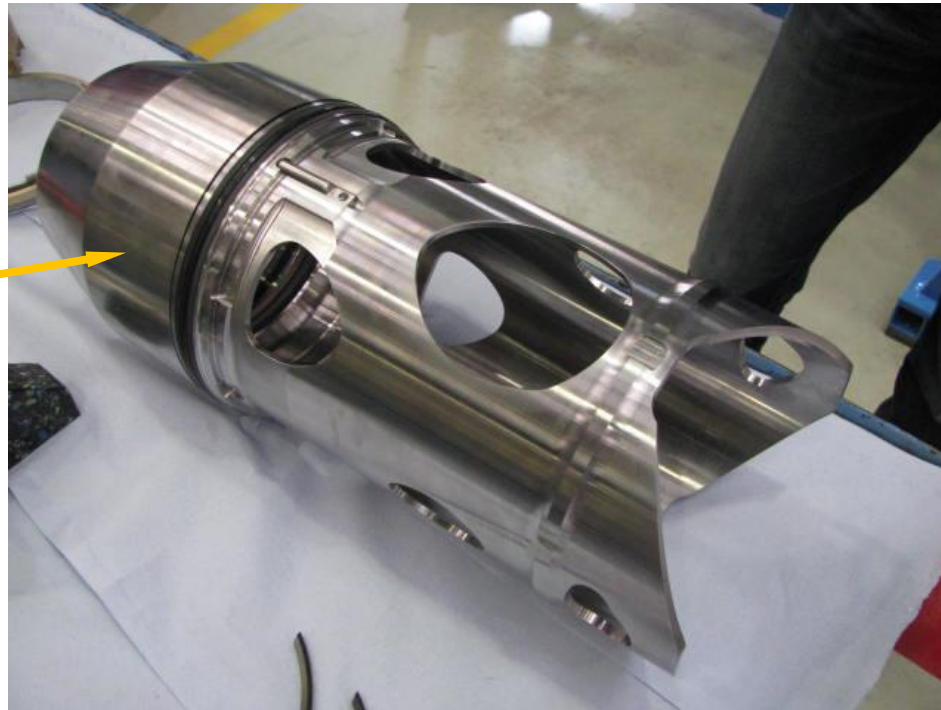


# A350 NLG Liebherr Tooling Catalogue

## Mounting Tool PN: 5814A0000-01

✗	Line Maintenance	✓	4816A0000-06
✓	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 5814A0000-01

 Function: Seal installation slider

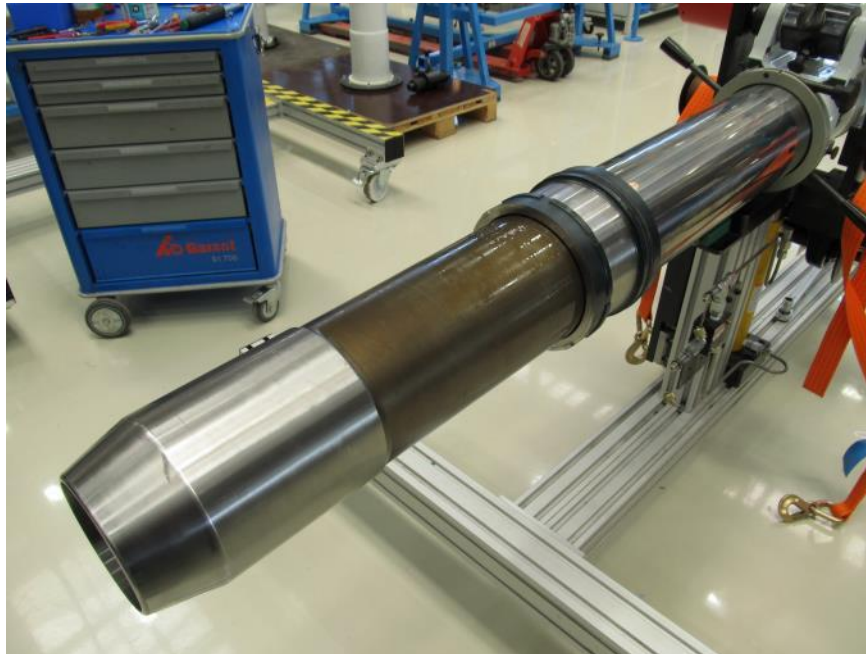


# A350 NLG Liebherr Tooling Catalogue

## Mounting Sleeve PN: 5677-0001

✗	Line Maintenance	✓	4816A0000-06
✓	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 5677A0000-01

 Function: To install bearing on shock strut

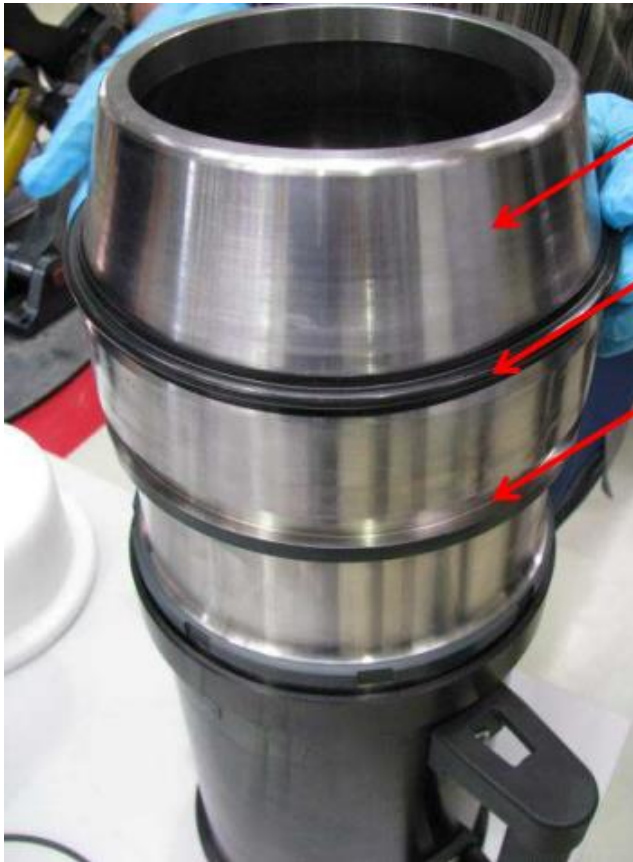

# A350 NLG Liebherr Tooling Catalogue

## Mounting Device PN: 5815A0000-01

✗	Line Maintenance	✓	4816A0000-06
✓	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 5815A0000-01

Function: Scraper ring installation



 
 
# A350 NLG Liebherr Tooling Catalogue

## Mounting Device PN: 5807A0000-01

✗	Line Maintenance	✓	4816A0000-06
✓	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 5807A0000-01

Function: Steering cuff installation

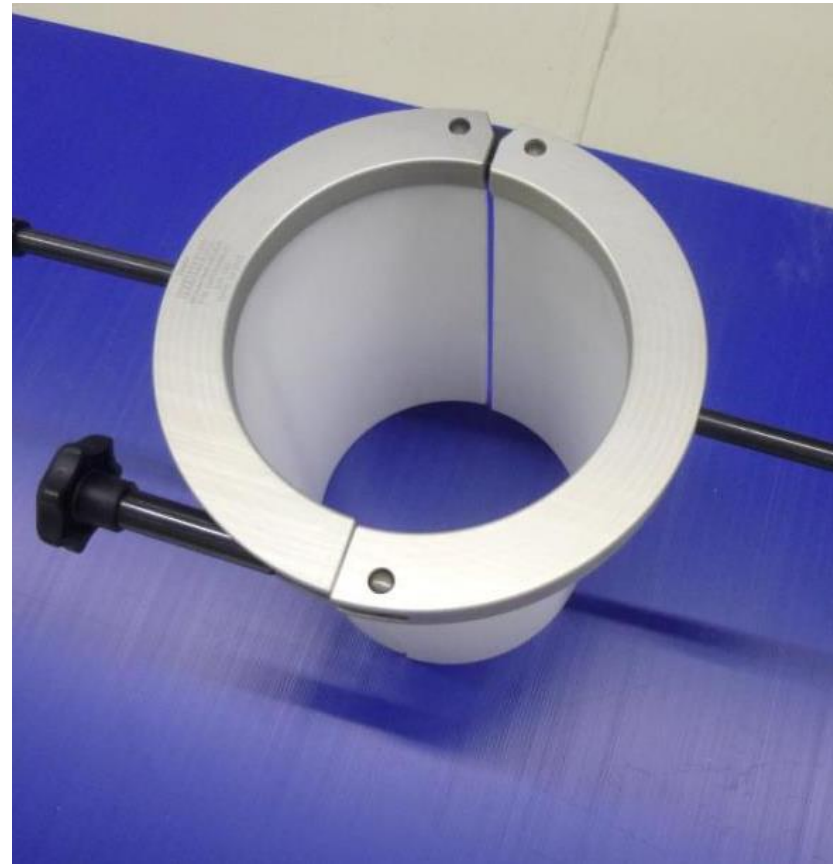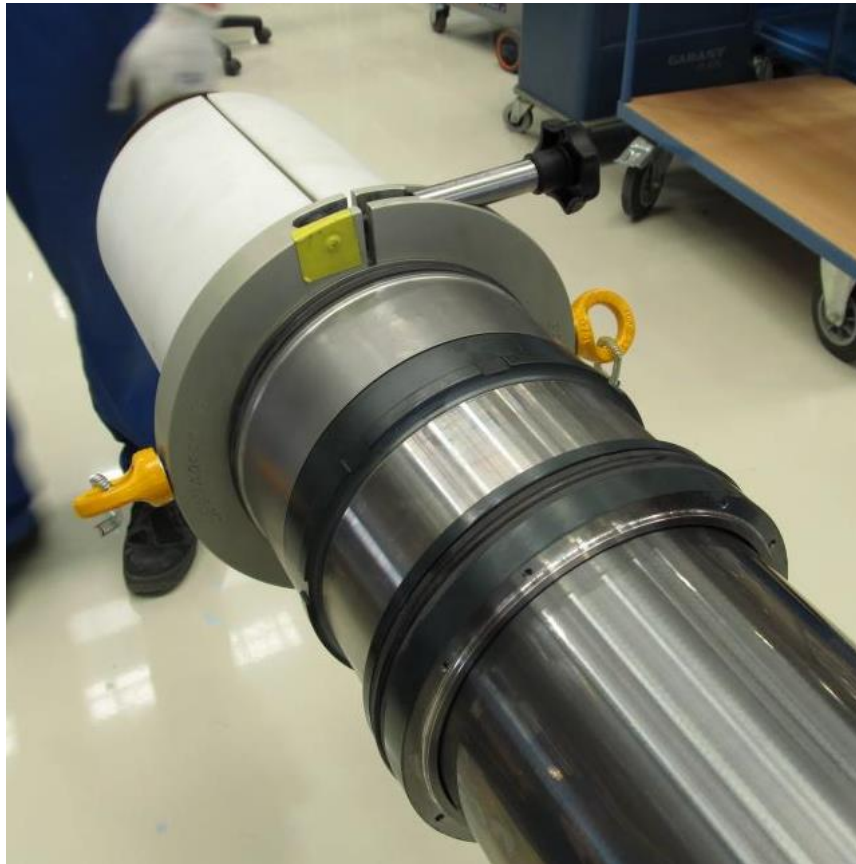




# A350 NLG Liebherr Tooling Catalogue

## Installation Tool PN: 5035-0043W01

✗	Line Maintenance	✓	4816A0000-06
✓	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 5035-0043

 Function: Rotation of ring to find screw position

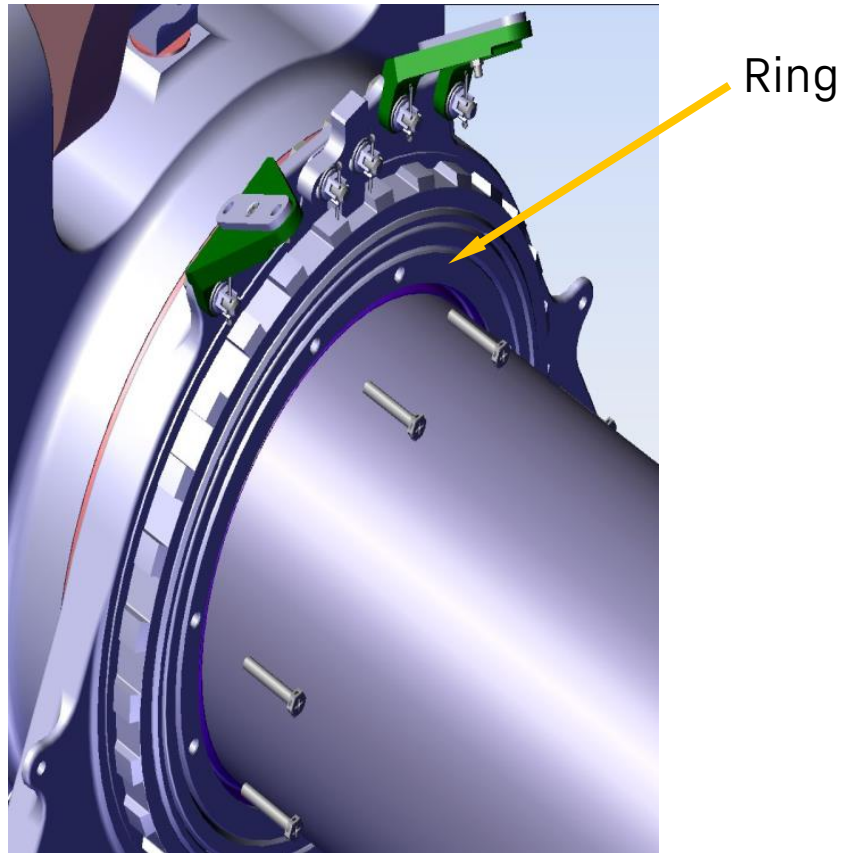


# A350 NLG Liebherr Tooling Catalogue

## Lifting Gear PN: 6260A6900-01

✗	Line Maintenance	✓	4816A0000-06
✓	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 6260A6900-01

 Function: Lifting of NLG out of transport box

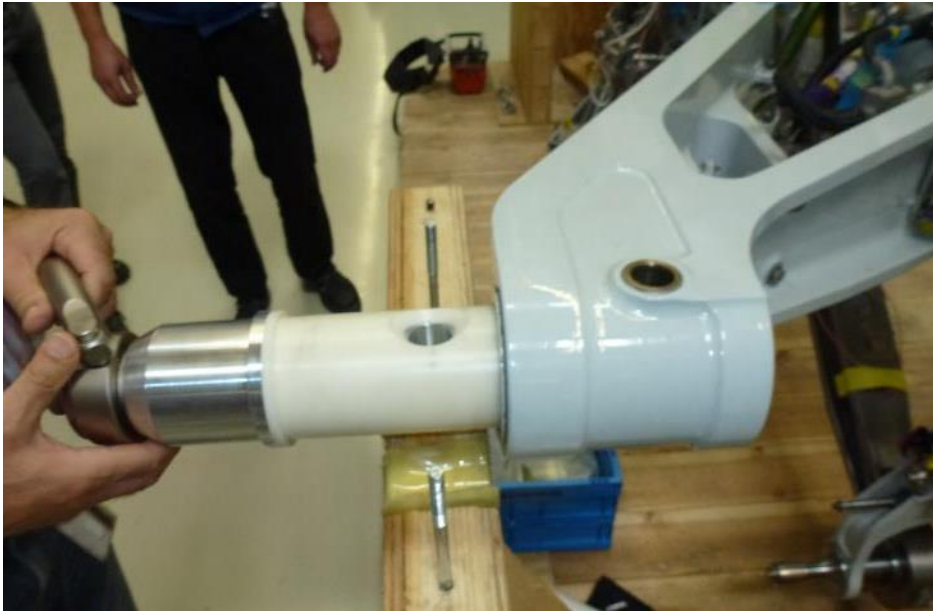

# A350 NLG Liebherr Tooling Catalogue

## Socket Wrench PN: 6260-0003

Function: Wheel nut removal and installation

✓	Line Maintenance	✓	4816A0000-06
✗	Heavy Maintenance	✓	6406A0000-01
Ref.: TEM 6260-0003			



# A350 NLG Liebherr Tooling Catalogue

## Extension PN: 6904A9100-01

 
✓	Line Maintenance	✓	4816A0000-06
✗	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 6260-0003

Function: Extension for Wheel nut (PN: 6260-0003)



WHEEL NUT PN (6260-0003)

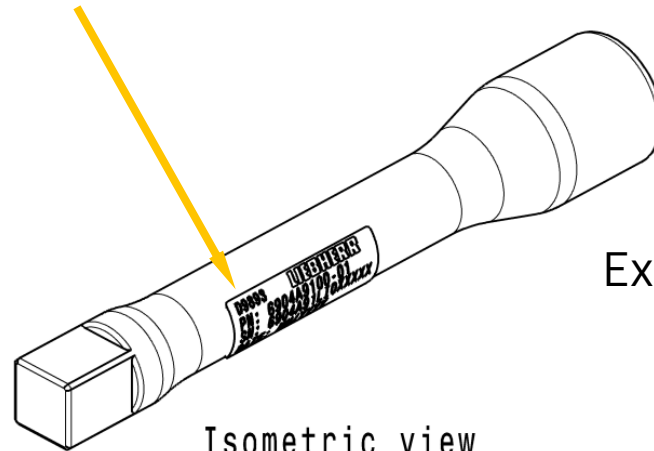

Isometric view  
Scale: 1:1

Extension PN: 6904A9100-01



# A350 NLG Liebherr Tooling Catalogue
  
## Removal Tool PN: 6904A9000-01

✓	Line Maintenance	✓	4816A0000-06
✗	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 6904A9000-01

Function: Removal of transfer tubes SCOV

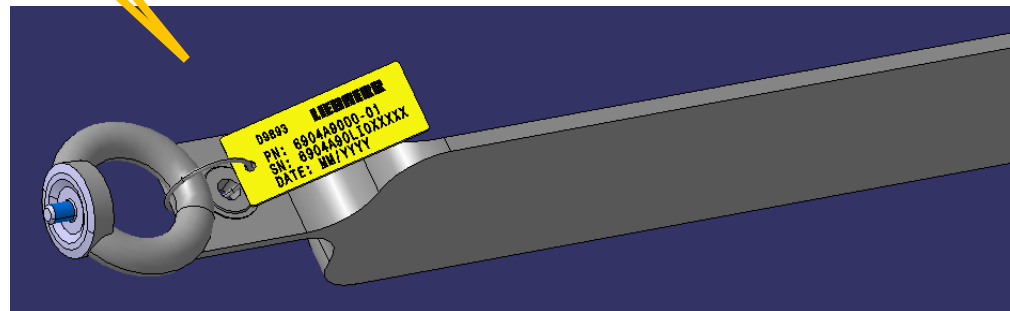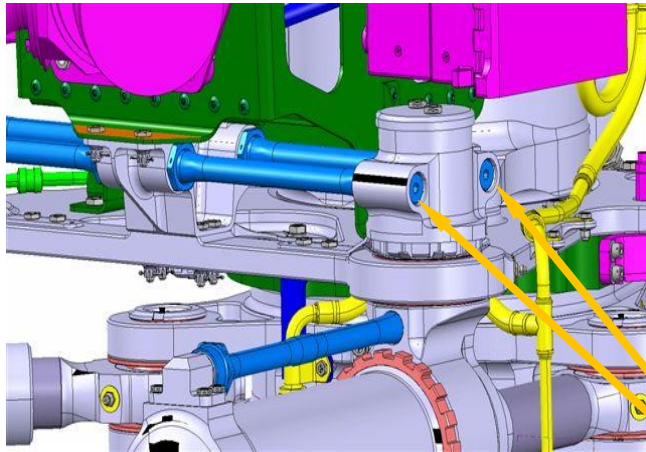

Tool necessary for LLI SB-4816A-32-16 & SB-6406A-32-03


# A350 NLG Liebherr Tooling Catalogue
 
## Mounting Device PN: 5665A0000-01


✓	Line Maintenance	✓	4816A0000-06
✗	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM 5665A0000-01

Function: SCOV PRE PN: 4818A0000-06 seal installation set transfer tube capable on both sides (SCOV SIDE & CONNECTING BLOCK SIDE)

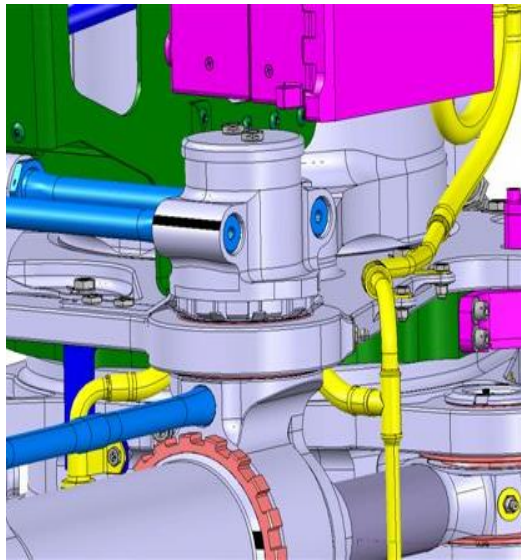


PRE: Transfer Tubes  
PN: 4816-0033

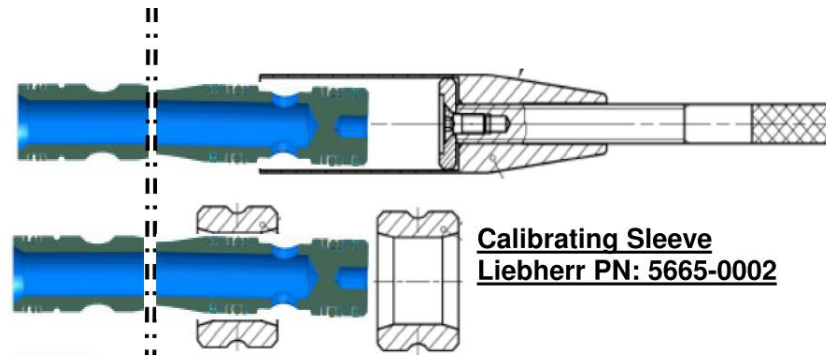 


Adjustable seal Guide  
Liebherr PN: 5665A0100-01

Calibrating Sleeve  
Liebherr PN: 5665-0002

 PRE-MOD: PNR 4818A0000-06

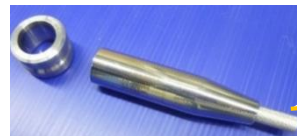

Tooling applicable for both sides

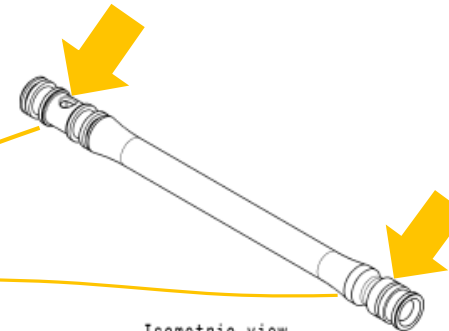 

Isometric view  
Scale: 1:1


# A350 NLG Liebherr Tooling Catalogue
 
## Mounting Device PN: 5665B0000-01

✓	Line Maintenance	✓	4816A0000-06
✗	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM No.: TBD

Function: SCOV POST PN: 4818B0000-01 seal installation set transfer tube Tool  
 PN: 5665B0000-01 capable only on SCOV side

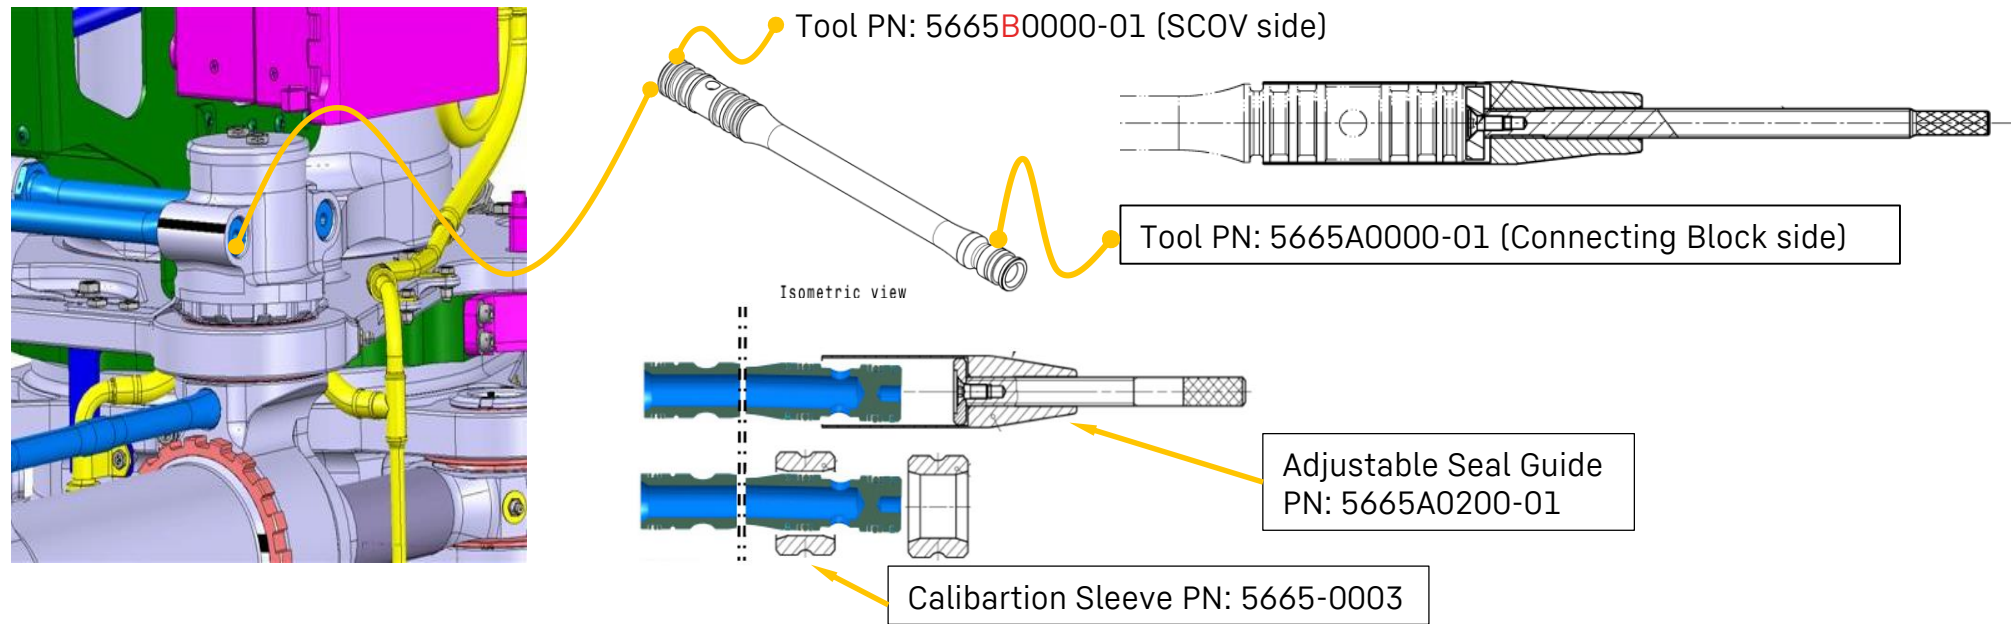

- NOTE: POST SCOV PN: 4818B0000-01 has a higher transfer tube diameter on SCOV side  
 For SCOV PN: 4818B0000-01 Tool Set PN: 5665A0000-01 AND PN: 566B0000-01 required
- Both tools necessary for LLI SB-4816A-32-16 & SB-6406A-32-03 (Modified SCOV PN: 4818B0000-01)

# A350 NLG Liebherr Tooling Catalogue

 
## Mounting Device PN: 5662A0000-01

✓	Line Maintenance	✓	4816A0000-06
✗	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM No.: TBD


Function: Coupling Plug seal installation Set (O-Ring & Back-up Ring)

Tool PN: 5662-0002

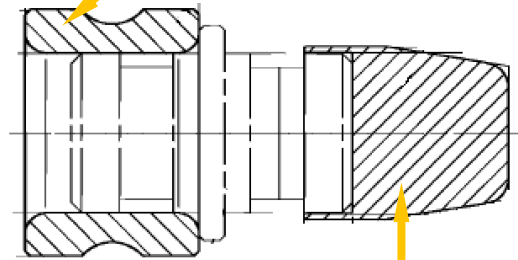

Tool PN: 5662-0001

 POST-MOD: PNR 4818B0000-01

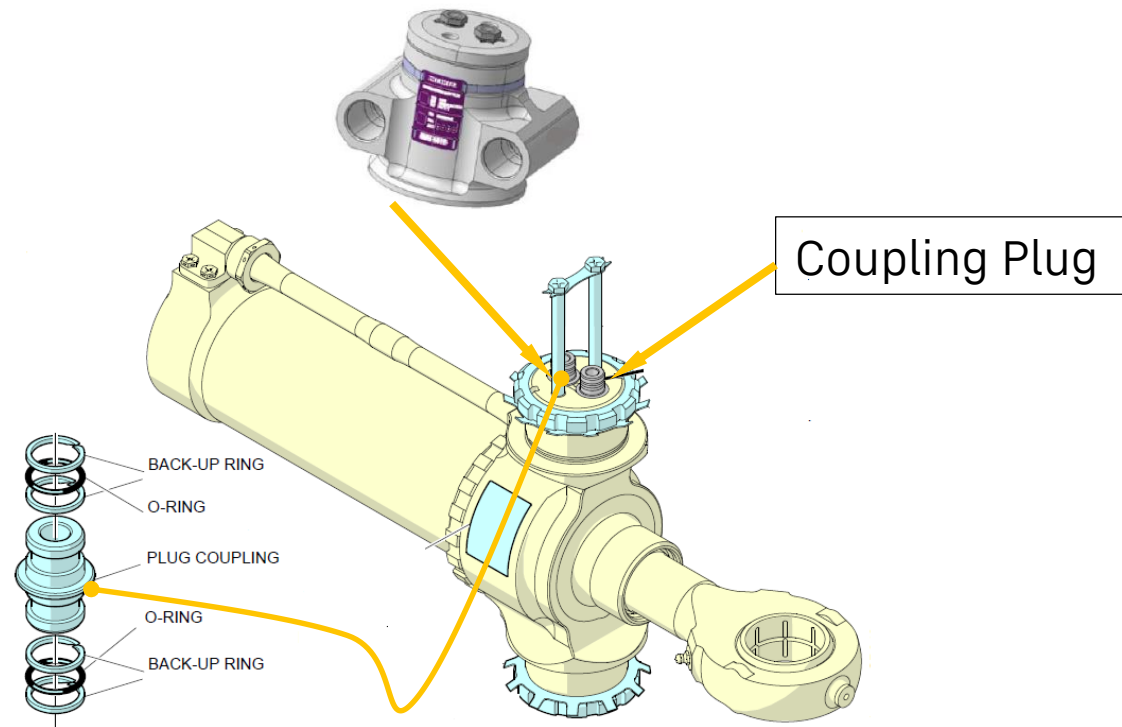


Tool necessary for LLI SB-4816A-32-16 & SB-6406A-32-03



# A350 NLG Liebherr Tooling Catalogue
 
## 6287A0000-01 Uplock Roller Nut

Function: Removal of Uplock Roller Nut

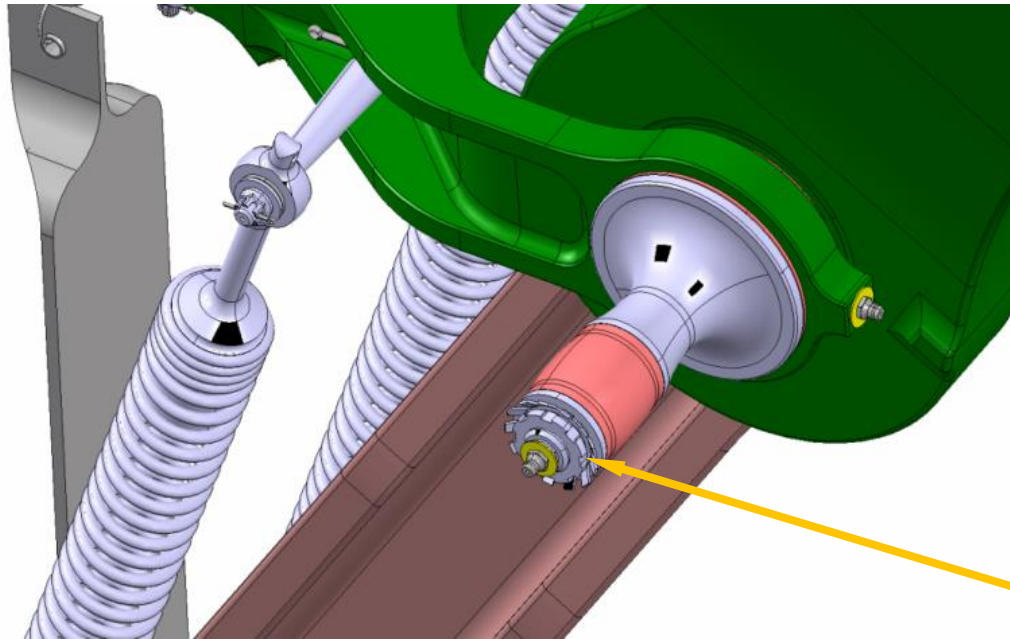

✓	Line Maintenance	✓	4816A0000-06
✗	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM No.: TBD



# A350 NLG Liebherr Tooling Catalogue
  
## 6286A0000-01 Bolt Door Stop

✓	Line Maintenance	✓	4816A0000-06
✗	Heavy Maintenance	✓	6406A0000-01

Ref.: TEM No.: TBD

Function: Removal of Crank Bolt Door Stop

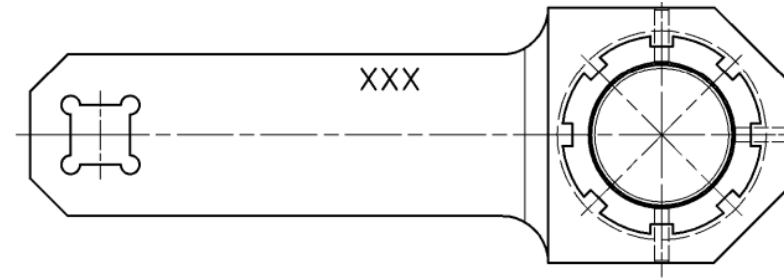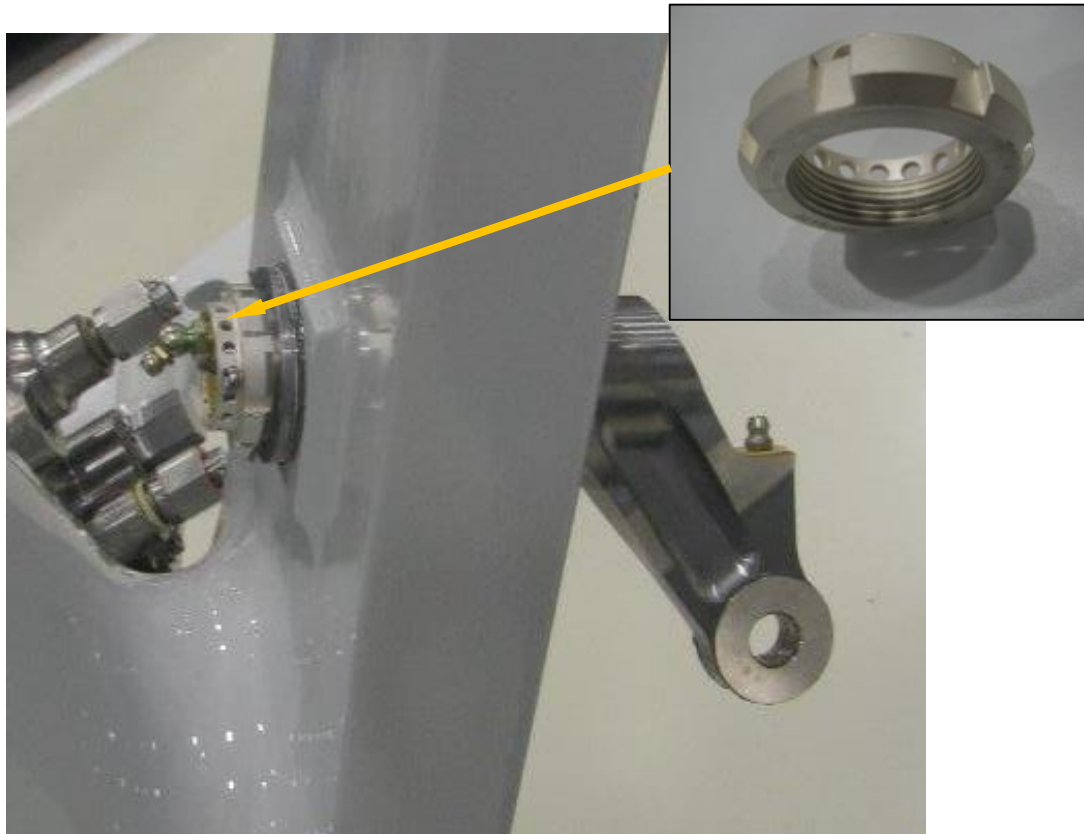

## A350 NLG Liebherr Tooling Cataloge

# REVISION RECORD

PAGE	DATE	CHANGE	REMARK
1	02.2018	PROCURABLE SET PN: 6904A0000-02 to 6904A0000-01	TYPO / REF. BOM
2	02.2018	PROCURABLE SET PN: 6904A0000-02 to 6904A0000-01	TYPO / REF. BOM
3	02.2018	PN: 6904A0000-02 to 6904A0000-01	TYPO / REF. BOM
6/17/27/53	02.2018	TEM ref. number added	TEM available
6	02.2018	PN: 6904A9800-01 and PN: 6904A9700-01 added	TEM available
27	10.2018	Insert PNs 6260A2100 & 2200 added	REF. BOM
37	10.2018	Didsbury Hoist Kit added	N.A
8-56	08.2019	A350 NLG PN & Maintenace Traffic Light added	N.A
55	05.03.2020	New Transfer Tube Seal Installation Tooling added	N.A
39	16.07.2021	Tool radius diffrence for A350 800/900 and Common NLG	N.A
56	08.10.2021	Coupling Plug Seal installation tool introduced	N.A
All	27.05.2022	Change to corporate identity	N.A

# REVISION RECORD

PAGE	DATE	CHANGE	REMARK
37	04.05.2022	Datenblatt ID 11044715 added	N/A
36	04.05.2022	Specific locking pin note added – only one locking pin can be activated	N/A

# Thank you for your attention

*© LIEBHERR-AEROSPACE 2022. All rights reserved, expressly including, without limitation, the rights of translation, of adaptation to other languages, of reproduction by way of abstracts, photocopies, microfilms, Xerox and similar methods, electronic processing (storage, reproduction and the like), and of rearranging the contents.*